


Service Manual

PIONEER®
The Art of Entertainment



ORDER NO.
ARP2681

COMPACT DISC PLAYER

PD-202

PD-102

PD-202 AND PD-102 HAVE THE FOLLOWING:

Type	Model		Power Requirement	Remarks
	PD-202	PD-102		
KU	○	○	AC120V only	
KUXJ	○	○	AC120V only	
KUXJS	○	○	AC120V only	
KC	○	○	AC120V only	
KCXJ	○	○	AC120V only	
WEMXJS	○	○	AC220 - 240V	
WBXJS	○	○	AC220 - 240V	
WPW	○	○	AC220 - 240V	
RD	○	○	AC110 - 127V, 220 - 240V (switchable)	
WL	○	○	AC220 - 240V	

- This manual is applicable to the following: PD-202/KU, KUXJ, KUXJS, KC, KCXJ, WEMXJS, WBXJS, WPW and RD; PD-102/KU, KUXJ, KUXJS, KC, KCXJ, WEMXJS, WBXJS, WPW, RD and WL.
- For the following: PD-202/KUXJ, KUXJS, KC, KCXJ, WEMXJS, WBXJS, WPW and RD; PD-102/KU, KUXJ, KUXJS, KC, KCXJ, WEMXJS, WBXJS, WPW, RD and WL, refer to page 39.

CONTENTS

1. SAFETY INFORMATION	2	7. IC INFORMATION	38
2. DISASSEMBLY	4	8. FOR PD-202/KUXJ, KUXJS, KC, KCXJ, WEMXJS, WBXJS, WPW, RD AND WL TYPES	39
3. EXPLODED VIEWS, PACKING AND PARTS LIST ..	6	9. FOR PD-102/KU, KUXJ, KUXJS, KC, KCXJ, WEMXJS, WBXJS, WPW, RD AND WL TYPES	40
4. PCB CONNECTION AND SCHEMATIC DIAGRAM	13	10. PANEL FACILITIES	43
5. PCB PARTS LIST	26	11. SPECIFICATIONS	43
6. ADJUSTMENTS	28		

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.
PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2 Canada
PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911
 © PIONEER ELECTRONIC CORPORATION 1993

SJ FEB. 1993 Printed in Japan

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health & Safety Code, Section 25249.5).

When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with the solder. Also, when soldering do not inhale any smoke or fumes produced.

NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

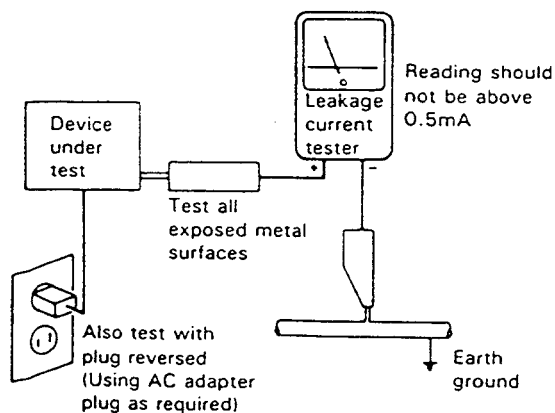

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

(FOR EUROPEAN MODEL ONLY)

VARO!

AVATTAESSA JA SUOJALUKITUS
OHITETTAESSA OLET ALTTIINA
NÄKYMÄTTÖMÄLLE LASERSATEILYLLE.
ÄLÄ KATSO SÄTEESEEN.

ADVERSEL:

USYNLIG LASERSTRÅLING VED ÅBNING
NÅR SIKKERHEDSAFBRYDERE ER UDE AF
FUNKTION. UNDGÅ UDSÆTTELSE FOR
STRÅLING.

VARNING!

OSYNLIG LASERSTRÅLNING NÅR DENNA
DEL ÄR ÖPPNAD OCH SPÄRREN
ÄR URKOPPLAD. BETRAKTA EJ STRÅLEN.



LASER
Kuva 1
Lasersateilyn
varoitusmerkki

WARNING!

DEVICE INCLUDES LASER DIODE WHICH
EMITS INVISIBLE INFRARED RADIATION
WHICH IS DANGEROUS TO EYES. THERE IS
A WARNING SIGN ACCORDING TO PICTURE
1 INSIDE THE DEVICE CLOSE TO THE LASER
DIODE.



LASER
Picture 1
Warning sign for
laser radiation

IMPORTANT

THIS PIONEER APPARATUS CONTAINS
LASER OF CLASS 1.
SERVICING OPERATION OF THE APPARATUS
SHOULD BE DONE BY A SPECIALLY
INSTRUCTED PERSON.

LASER DIODE CHARACTERISTICS


MAXIMUM OUTPUT POWER: 5 mw
WAVELENGTH: 780-785 nm

LABEL CHECK (SINGLE type)



WBXJS type



WEMXJS type

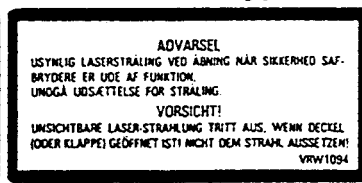

WEMXJS and WBXJS types

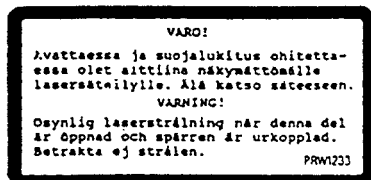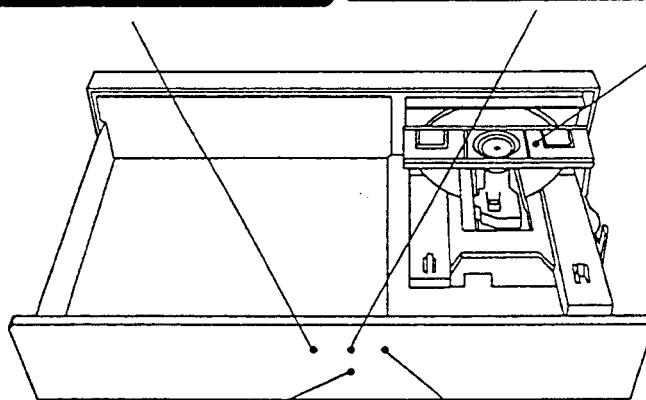

WEMXJS and
WBXJS types



WEMXJS and
WBXJS types

Additional Laser Caution

1. Laser Interlock Mechanism

The position of the switch (S601) for detecting loading completion is detected by the system microprocessor, and the design prevents laser diode oscillation when the switch (S601) is not in CLMP terminal side (when the mechanism is not clamped and CLMP signal is high level). Thus, the interlock will no longer function if the switch (S601) is deliberately set to CLMP terminal side (if CLMP signal is low level). In the test mode * the interlock mechanism will not function.

Laser diode oscillation will continue, if pin 1 of M51593FP (IC101) on the preamplifier board loaded on pickup assembly are connected to GND, or pin 19 is connected to low level (ON), or else the terminals of Q101 are shorted to each other (fault condition).

2. When the cover is opened, close viewing of the objective lens with the naked eye will cause exposure to a Class 1 laser beam.


* Refer to page 29.

2. DISASSEMBLY

2.1 REMOVING THE TRAY (See Fig. 2 - 1.)

As the teeth of the tray cannot be bent, remove the tray according to the following procedures.

- ① Remove the bonnet.
- ② Press the OPEN/CLOSE (▲) button on the front panel, and move the tray to the OPEN position.
- ③ Remove the tray name plate.
(Release the two teeth of the tray name plate, and lift it up.)
- ④ Push in the tray.
- ⑤ Remove the clamber base.
(Remove the two screws (A) and release the four teeth of clamp base.)
- ⑥ Remove the operation panel.
- ⑦ Pull out the tray.

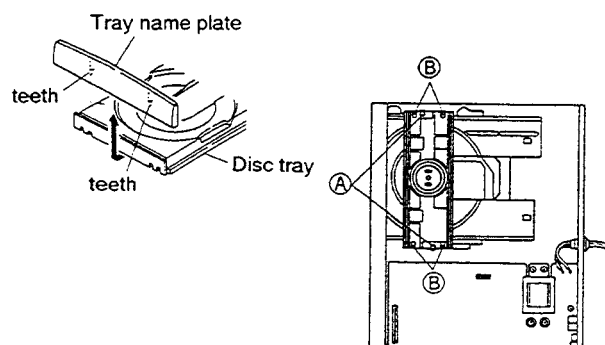

Note: When opening with your hands, do so as follows.

- 1) Pull the right edge (A) of the clamber cam in the direction of the operation panel. The servo mechanism descends, the clamber is released, and the tray opens about 2 cm.

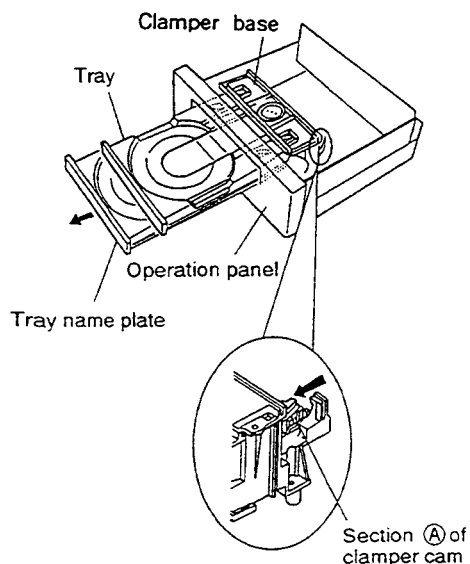


Fig. 2 - 1.

2.2 REMOVING THE SERVO MECHANISM ASSEMBLY

- ① Remove the tray and clamber base. (See 2.1.)
- ② With the servo mechanism assembly in the descended condition (tray open position), remove the 4 screws (B) holding this assembly, and screw (C) holding the ground lead. Cut the binder holding the bundle of wires onto the loading base with a pair of nippers.

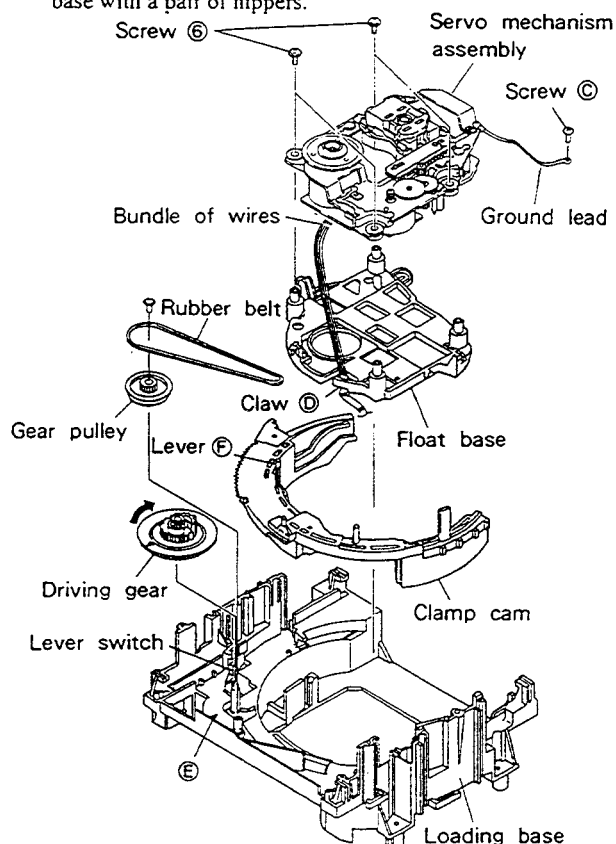


Fig. 2 - 2.

2.3 REMOVING THE FLOAT BASE (See Fig. 2 - 2.)

- ① Remove the servo mechanism assembly. (See 2.2.)
- ② Rotate the driving gear in the clockwise direction fully. The clamp cam will rotate in the counterclockwise direction, and the float base will rise.
- ③ After removing the bundle of wires from claw (D) of the float base, remove the float base.

Note: If the clamp cam does not rotate even if the driving gear is rotated, it means that these gears are not engaged. In this case, engage them in the correct position according to the following procedures, and rotate the driving gear.

- 1) Adjust the ▼ mark of the driving gear (on the round hole) to the ▲ mark (E) of the loading base.
- 2) Rotate lever (F) on the clamp cam in the counterclockwise direction.

3. EXPLODED VIEWS, PACKING AND PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

3.1 EXTERIOR

Parts List

Mark	No.	Description	Part No.
	1	Bonnet	PYY1147
	2	Screw	FBT40P080FZK
	3	Screw	BBZ30P080FZK
	4	Screw	BBZ30P160FMC
NSP	5	Single mechanism assembly	PXA1487
	6	Tray name plate	PNW2240
NSP	7	PCB spacer	PNY - 404
	8	Insulator	PNW1912
$\triangle$	9	Power transformer	PTT1237
	10	Screw	IBZ30P100FCC
	11	Screw	IBZ30P150FCC
$\triangle$	12	Cord stopper	CM - 22C
$\triangle$	13	AC power cord	PDG1015
	14	Screw	BBZ30P060FMC
⊙	15	Mother board assembly	PWM1735
NSP	16	Headphone board assembly	PWZ2522
	17	Headphone knob	PAC1707
NSP	18	Rear base	PNA1921
	19	Function panel assembly	PEA1267
	20	Display window	PAM1599
	21	PIONEER badge	PAM1608
	22	Function panel	PNW2248
	23	Mode button	PAC1709
NSP	24	Under base	PNA1732
	25	10 key	PAC1735
	26	Function button	PAC1711
	27	LED lens	PNW2019
	28	Power button	PAC1708
NSP	29	Switch board assembly	PWZ2518
	30	Screw	PPZ30P120FMC
	31	Function board assembly	PWZ2511
	32	32P F.F.C./30V	PDD1041
NSP	33	65 label	ORW1069
	34	Screw	PDZ30P050FMC

2.4 REMOVING THE CLAMP CAM

- ① Remove the float base. (See 2.3.)
- ② Remove the gear pulley and driving gear.
- ③ After rotating the clamp cam fully in the counter clockwise direction, pull it up.

2.5 REMOVING THE MOTHER BOARD ASSEMBLY

- ① Remove CN131, CN202, CN205, CN351, and CN401 (connectors).
- ② Remove the screw ① securing the LINE OUT terminal from the rear.
- ③ Remove the screw ② to remove the wrapping of the power cord.
- ④ Remove the four screws ③ securing the board and the four screws ④ securing the power transformer.
- ⑤ Lift the mother board assembly straight up to remove it.

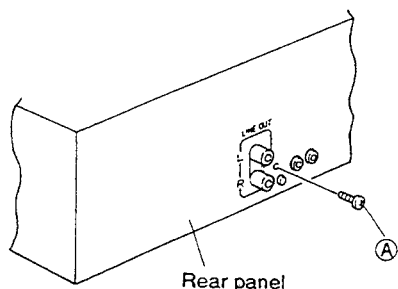
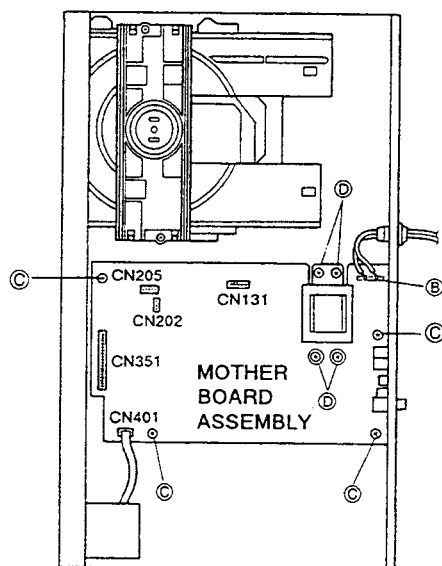


Fig. 2 - 3.

2.6 INSTALLING THE CLAMP CAM

- ① While pushing down the lever switch on the loading base towards the transformer board assembly, install the clamp cam.

2.7 INSTALLING THE FLOAT BASE

- ① Rotate the clamp cam in the counterclockwise direction fully, and install the float base.
For details on rotating the clamp cam, refer to "2.3 Removing the Float Base".

2.8 INSTALLING THE TRAY

- ① Rotate the driving gear in the counterclockwise direction, and lower the servo mechanism assembly to the maximum.
- ② Rotate the driving gear in the counterclockwise direction, and adjust the ▼ mark of the driving gear (on the round hole) to the ▲ mark of the loading base.
- ③ Insert the tray.


Note 1: If the servo mechanism assembly does not descend even if the driving gear is rotated, it means that the gears are not engaged.

In this case, perform ②, and rotate the driving gear once again.



Note 2: The servo mechanism assembly will not rise fully even if the tray is inserted completely. However, it rises to the maximum automatically when the power is supplied.

Exterior

NOTE: Screws adjacent to ▼ mark on the product are used for disassembly.

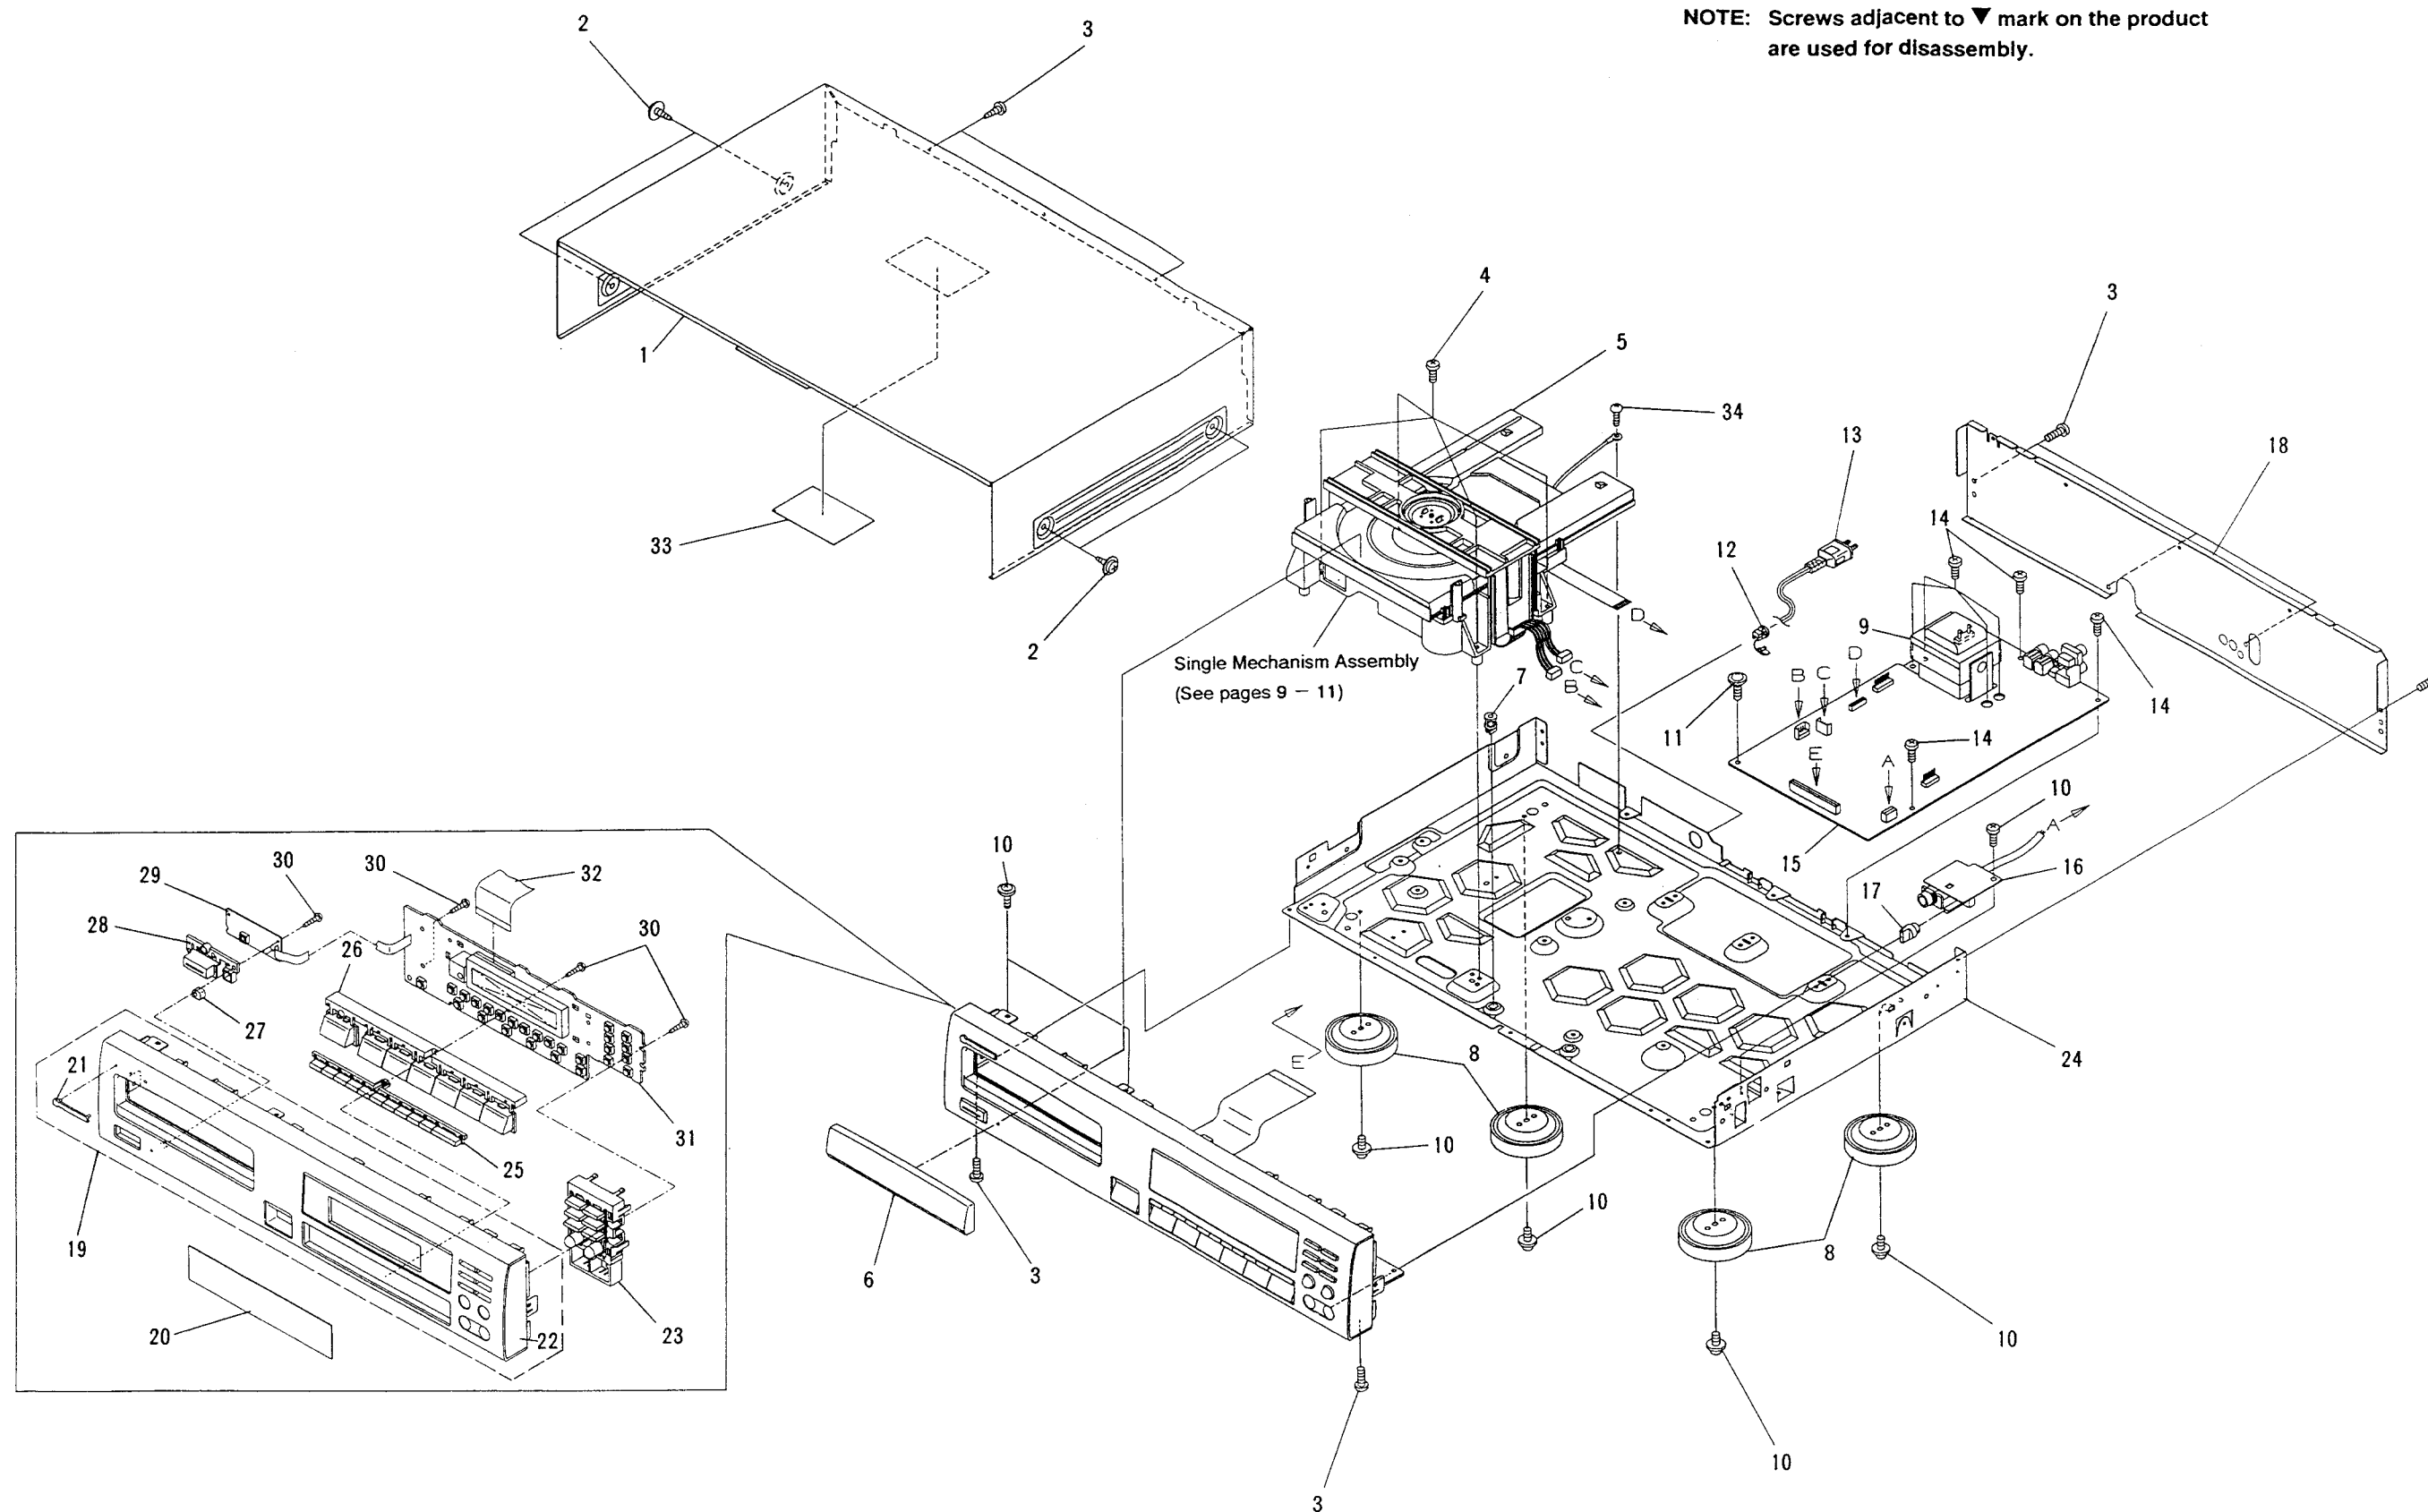


3.2 MECHANISM SECTION

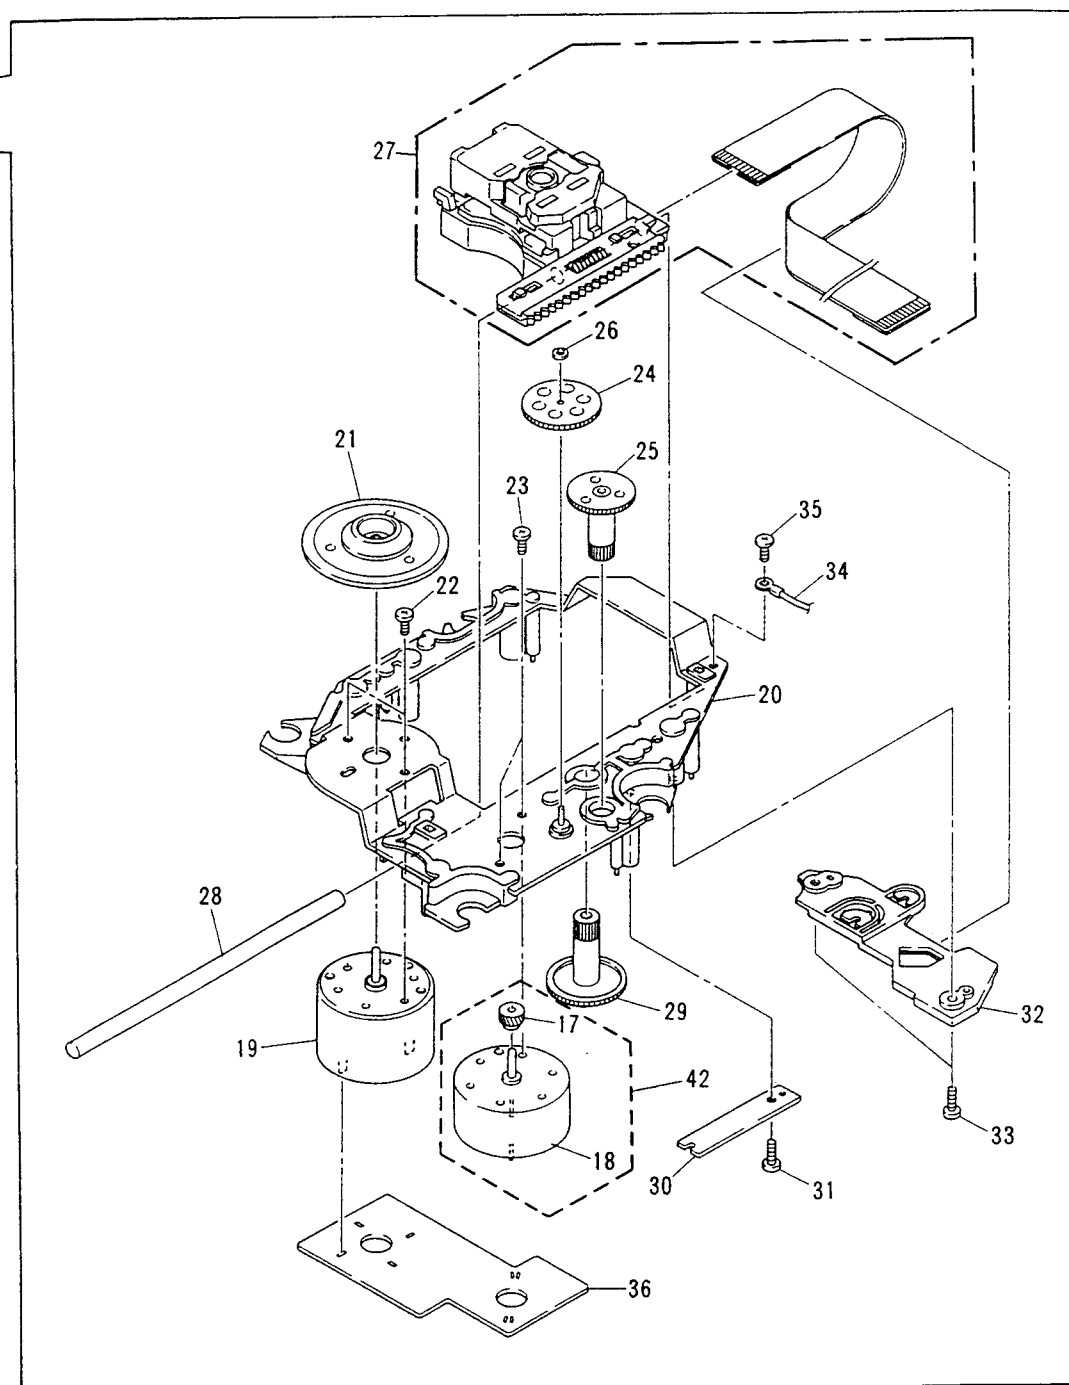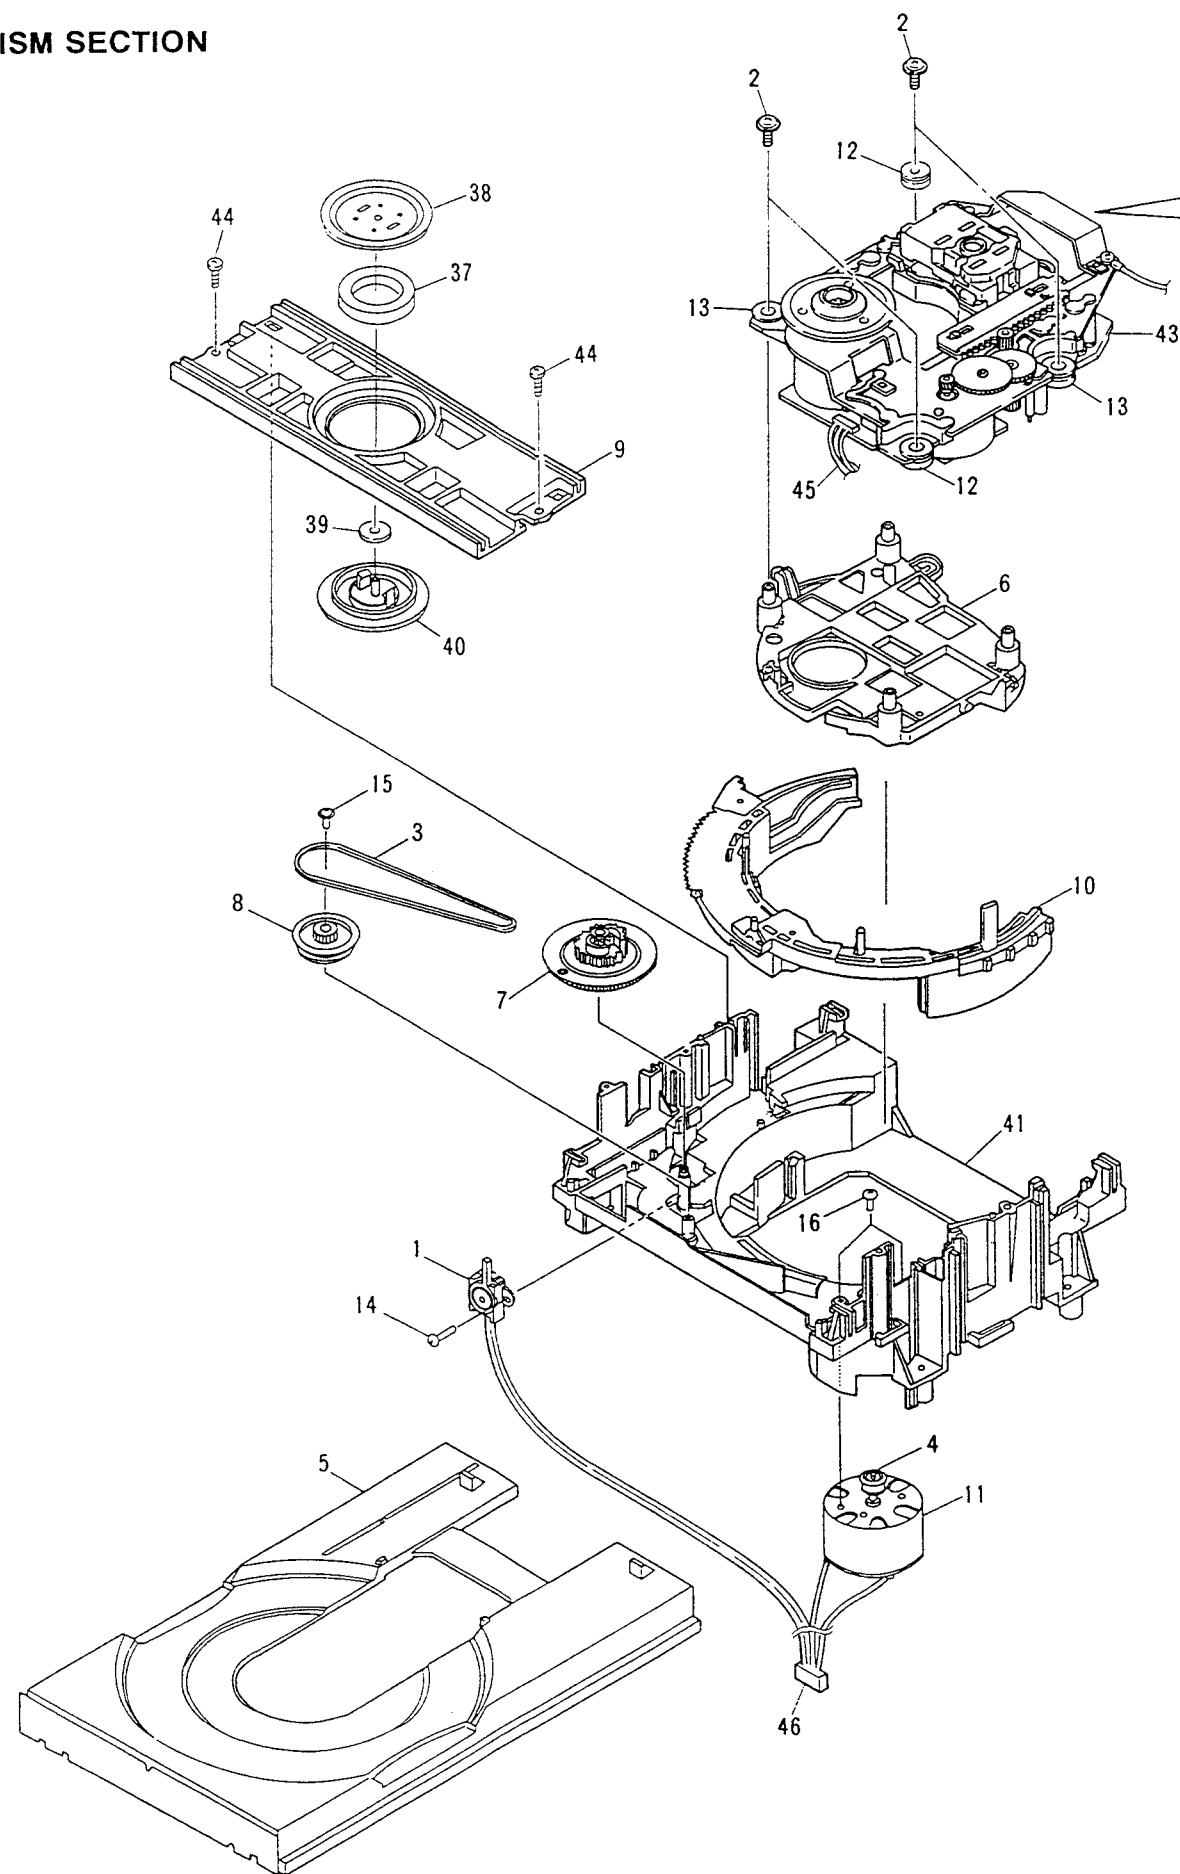

3.3 PACKING

Parts List

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Connection cord with mini plug	PDE - 319		6	Protector R	PHA1240
	2	Connection cord with pin plug	PDE1109		7	CD packing case	PHG1877
	3	Operating instructions (English)	PRB1182		8	Sheet	Z23 - 007
	4	Remote control unit	PWW1061		9	Battery cover	PZN1010
	5	Protector F	PHA1239	NSP	51	Dry cell battery (R03, AAA)	VEM - 022

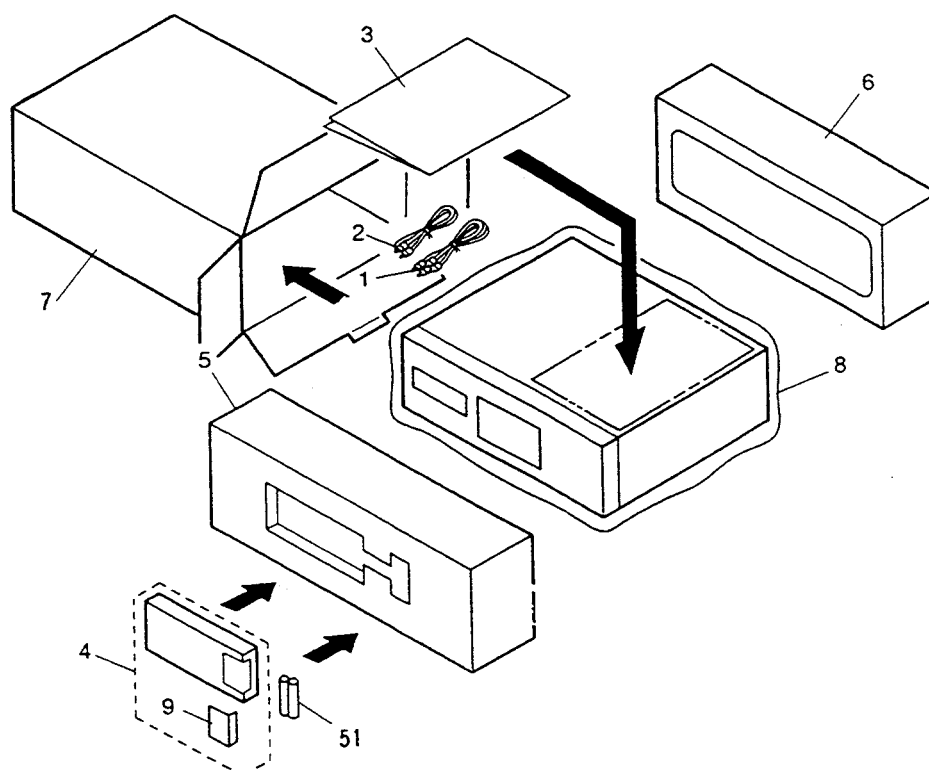

Note : The above packing diagram applies to products above serial number 3605002.

The following packing materials are used for products with serial number 3603001 to 3605001. As the packing materials are not interchangeable, do not use them for products with other serial number.


- Protector (L) PHA1255
- Protector (R) PHA1256
- Packing case PHG1959
- Spacer (FRONT) PHA1257
- Spacer (REAR) PHA1258


Parts List

Mark	No.	Description	Part No.
	1	Lever switch (CLAMP)	DSK1003
	2	Float screw	PBA1048
	3	Rubber belt	PEB1193
	4	Motor pulley	PNW1634
	5	Tray	PNW2265
	6	Float base	PNW2032
	7	Drive gear	PNW2266
	8	Gear pulley	PNW2034
	9	Clamper base	PNW2035
	10	Clamp cam	PNW2036
	11	DC motor/0.75W (LOADING)	PXM1010
	12	Float rubber	PEB1014
	13	Float rubber	PEB1132
	14	Screw	BPZ26P080FMC
	15	Screw	Z39 - 019
	16	Screw	PMZ26P040FMC
	17	Pinion gear	PNW2055
	18	DC motor (CARRIAGE)	PXM1027
	19	DC motor assembly (SPINDLE)	PEA1235
	20	Carriage base	PNW2058
	21	Disc table	PNW1608
	22	Screw	JFZ20P030FNI
	23	Screw	JFZ17P025FZK
	24	Gear 3	PNW2054
	25	Gear 2	PNW2053
	26	Washer	WT12D032D025
	27	Pickup assembly	PEA1179
	28	Guide bar	PLA1094
	29	Gear 1	PNW2052
NSP	30	Gear stopper	PNB1303
	31	Screw	BPZ20P060FMC
	32	PWB holder	PNW2057
	33	Screw	BPZ26P100FMC
NSP	34	Earth lead unit	PDF1104
	35	Screw	BBZ26P060FMC
NSP	36	Mechanism board assembly	PWX1192
NSP	37	Clamp magnet	PMF1014
NSP	38	Yoke	PNB1216
NSP	39	H spacer	PEB1249
NSP	40	Clamper S	PNW1609
NSP	41	Loading base	PNW2030
	42	DC motor assembly (CARRIAGE)	PEA1246
NSP	43	Servo mechanism assembly	PXA1478
	44	Screw	BBZ30P080FZK
NSP	45	Connector assembly (4P)	PDE1145
NSP	46	Connector assembly (5P)	PDE1201

• How to install the disc table

- 1 Use nipper or other tool to cut the two sections marked (A) figure 1. Then remove the spacer.
- 2 While supporting the spindle motor shaft with the stopper, put spacer on top of the carriage base and stick the disc table on top (takes about 9Kg pressure).
Take off the spacer.

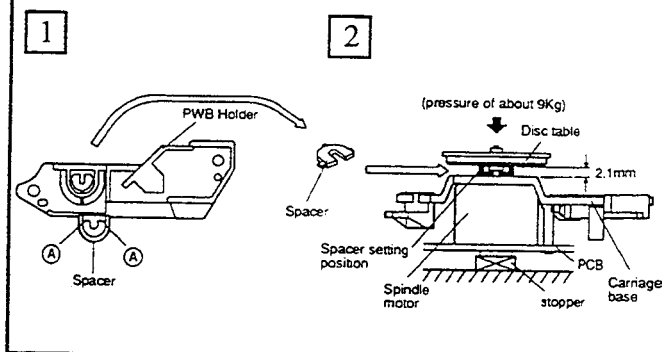

51-B

• View from soldering side


4. PCB CONNECTION AND SCHEMATIC DIAGRAM

MOTHER BOARD
(PWW1330:PD-10
(PWW1331:PD-10
(PWW1332:PD-10
(PWW1333:PD-10
(PWW1334:PD-10
(PWW1335:PD-20
(PWW1336:PD-20
(PWW1337:PD-20


AS2
HEV

2W

AS2
FU



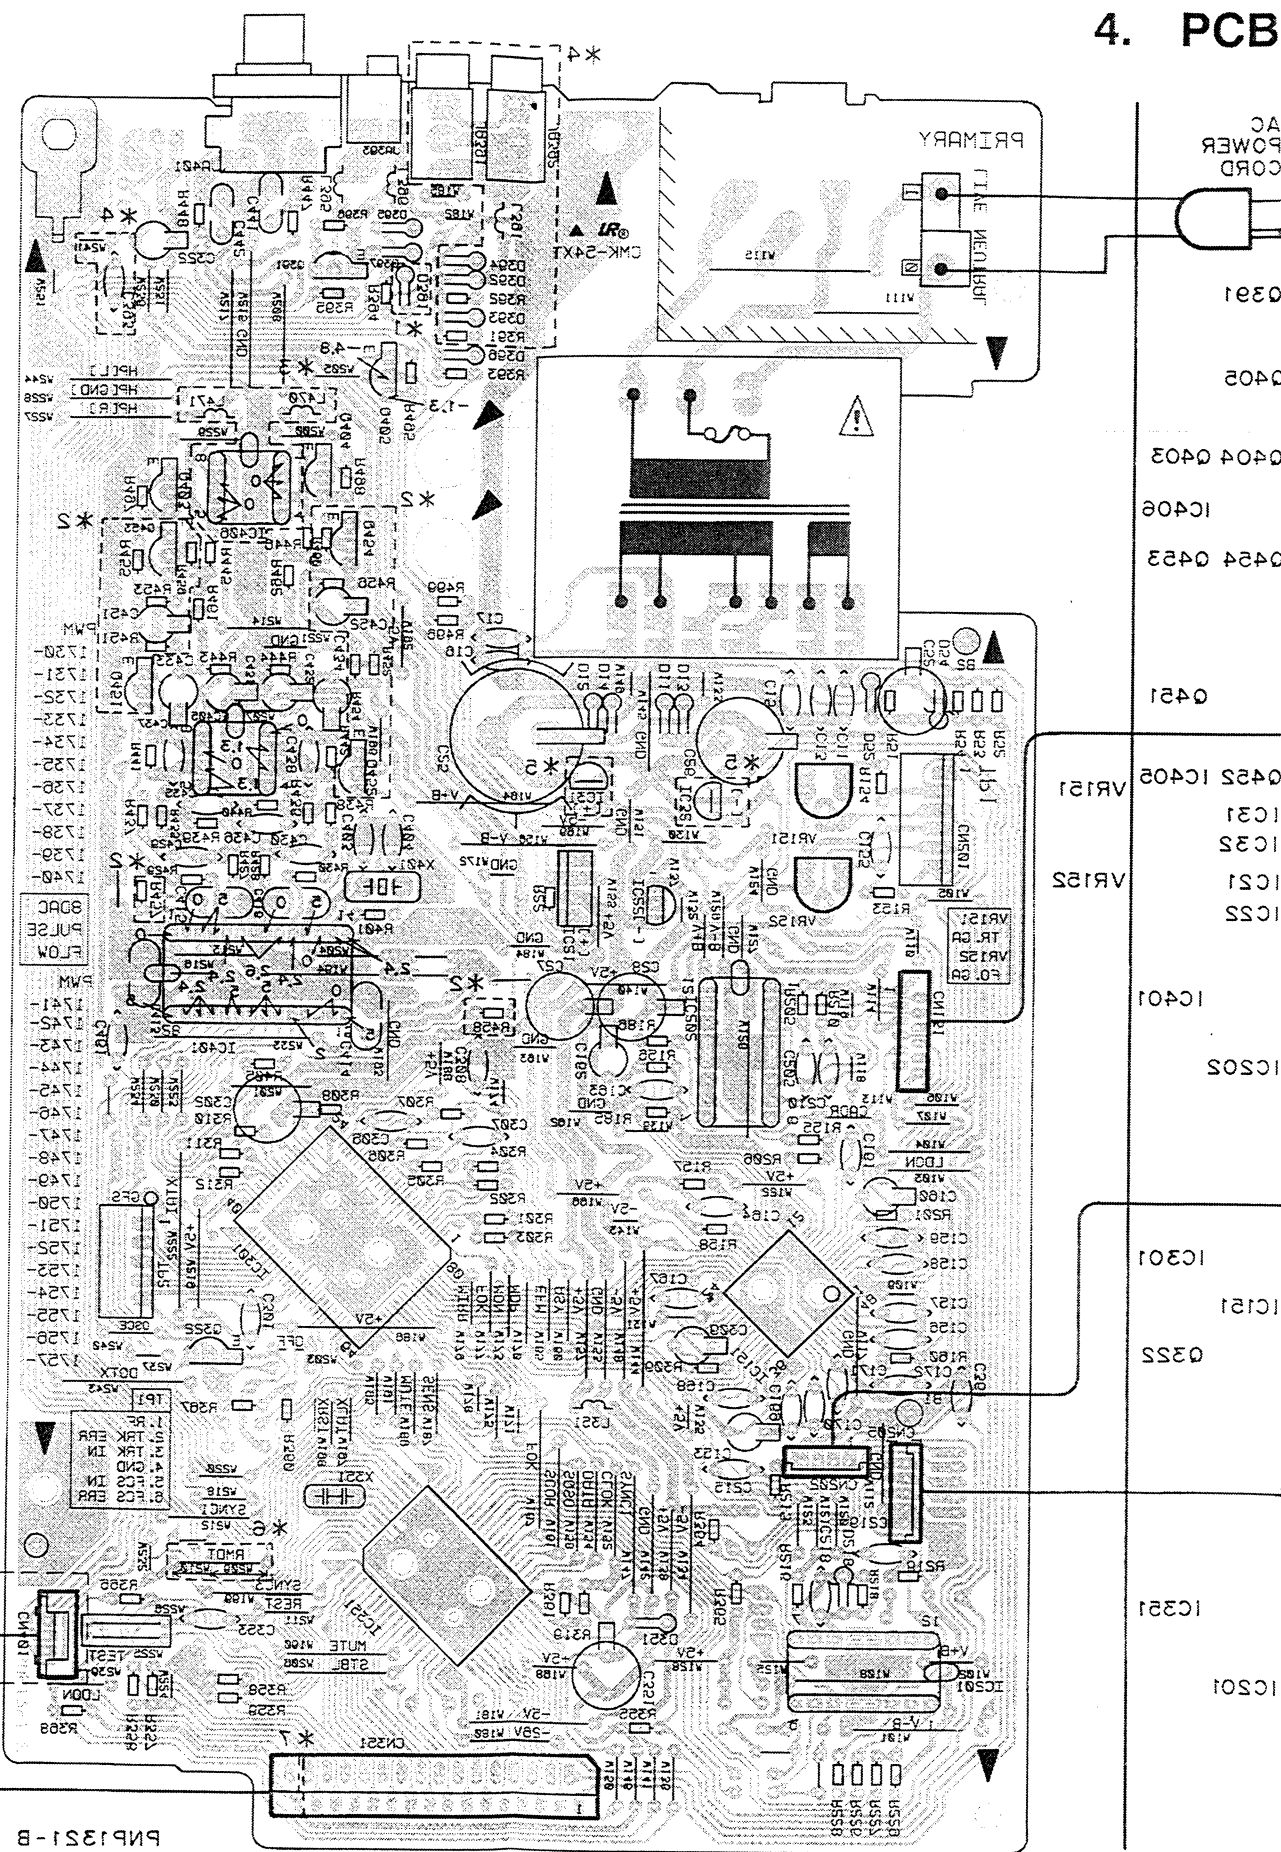


PD-505	30pin
PD-105	30pin
PD-505	32pin
PD-105	32pin

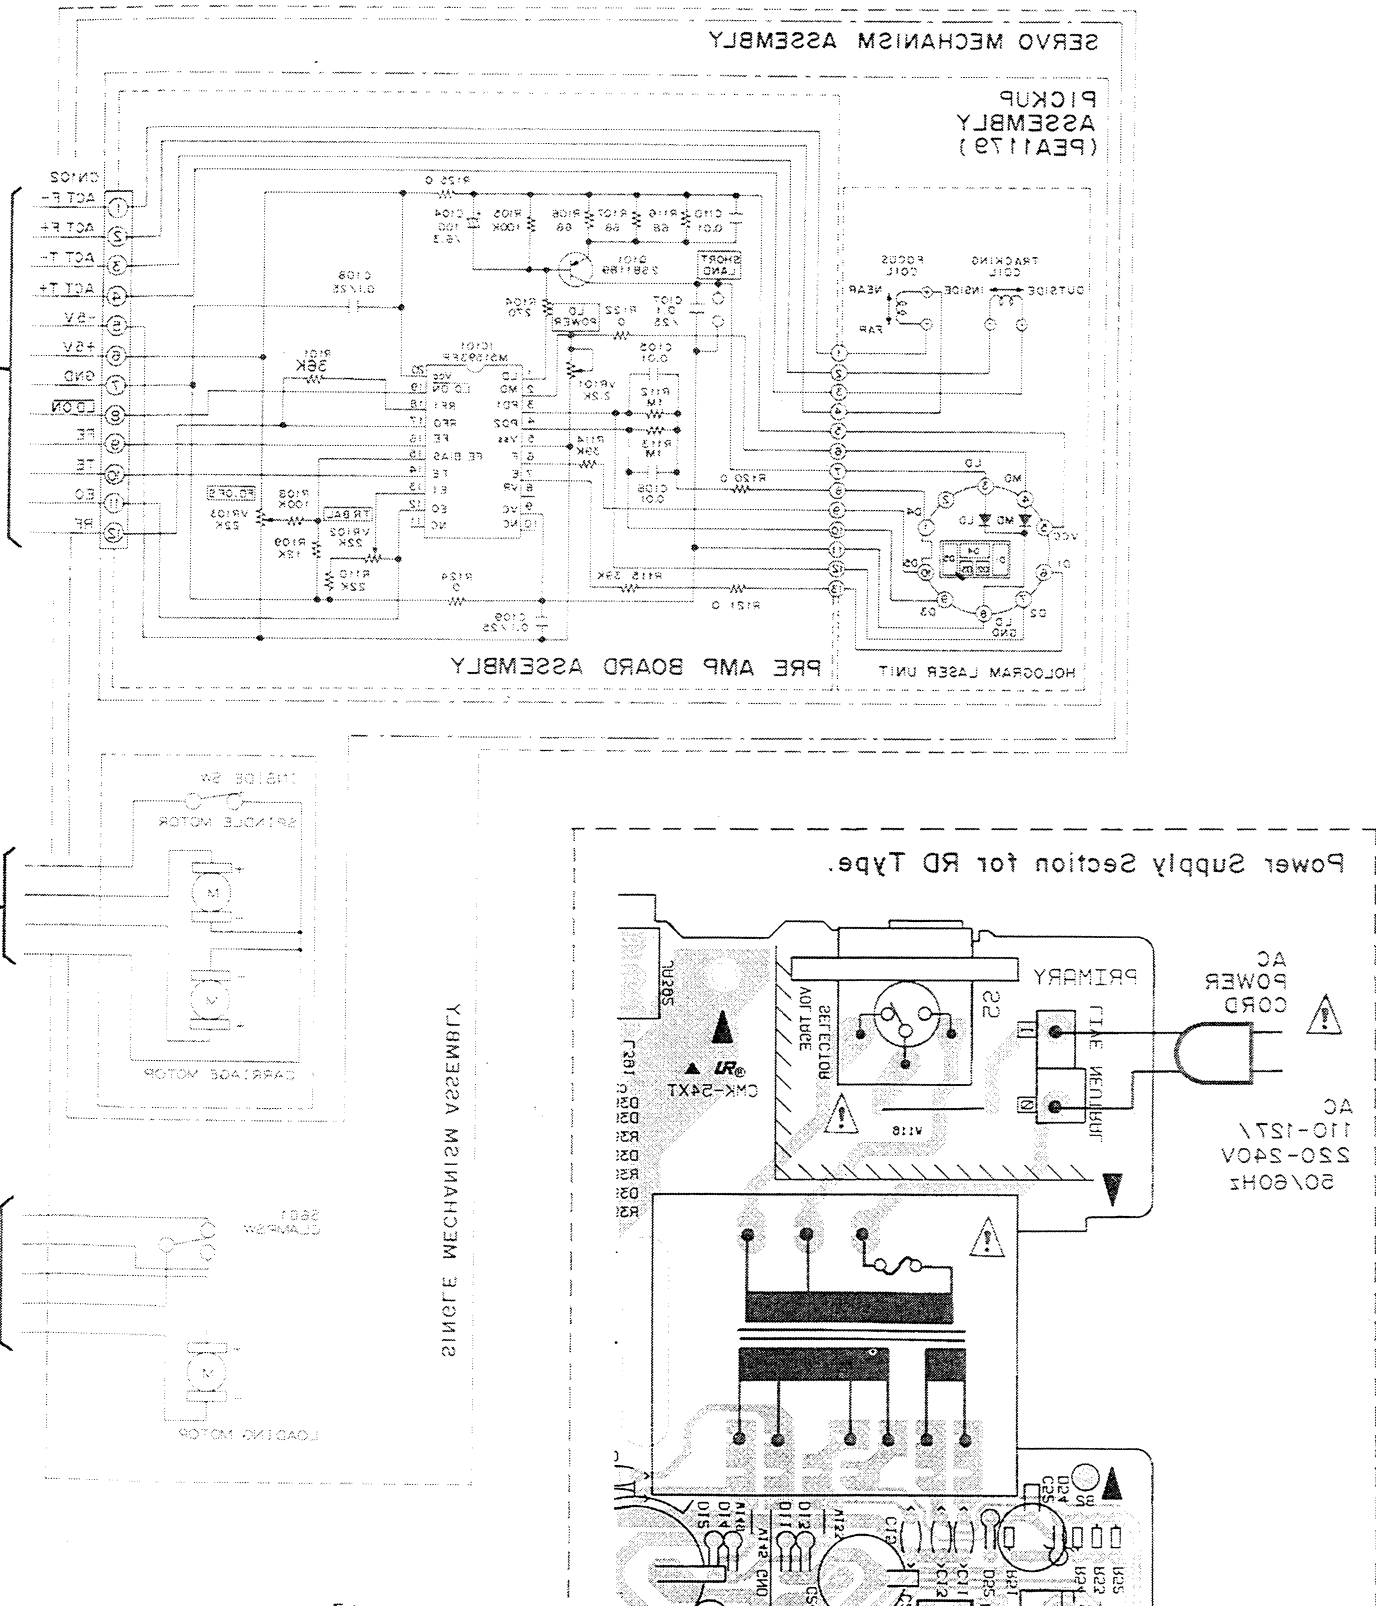


A
B
C
D

• View from component side

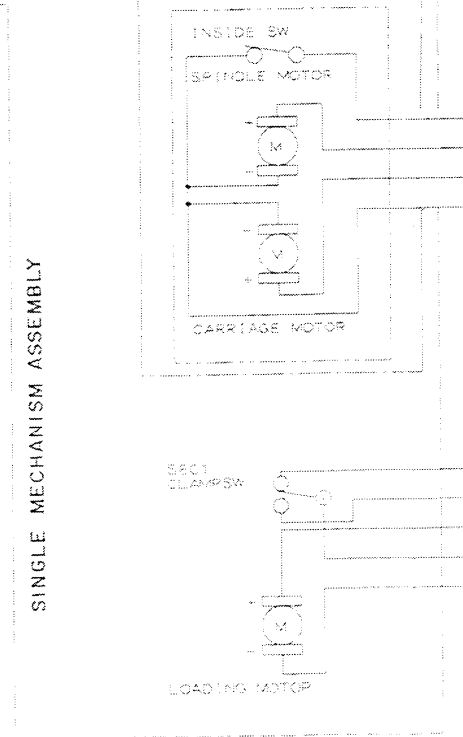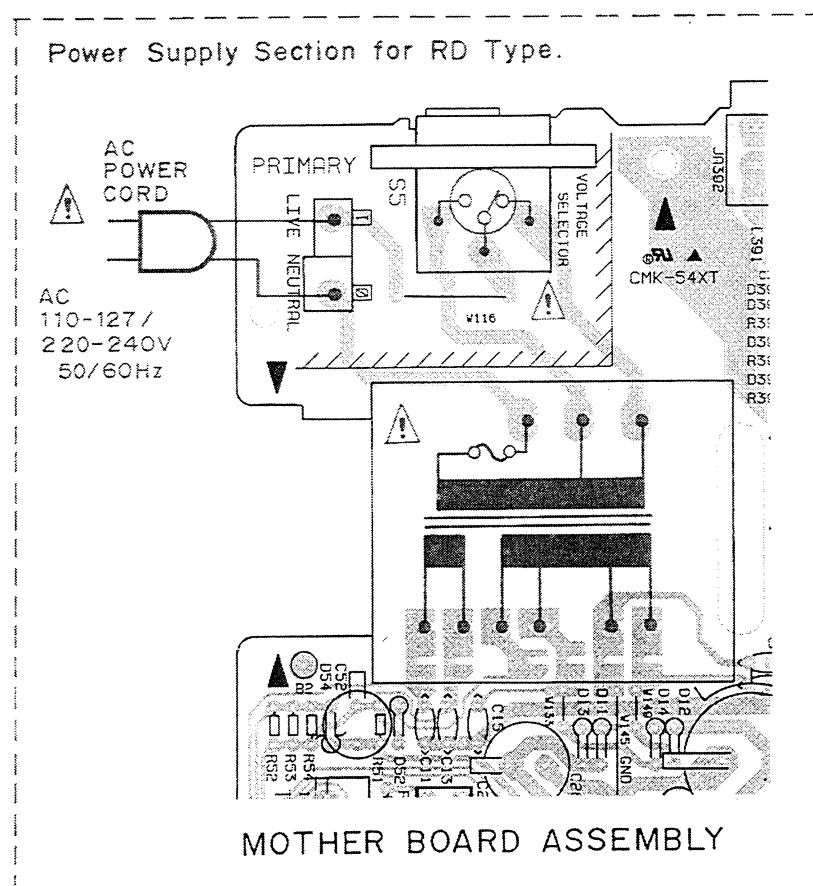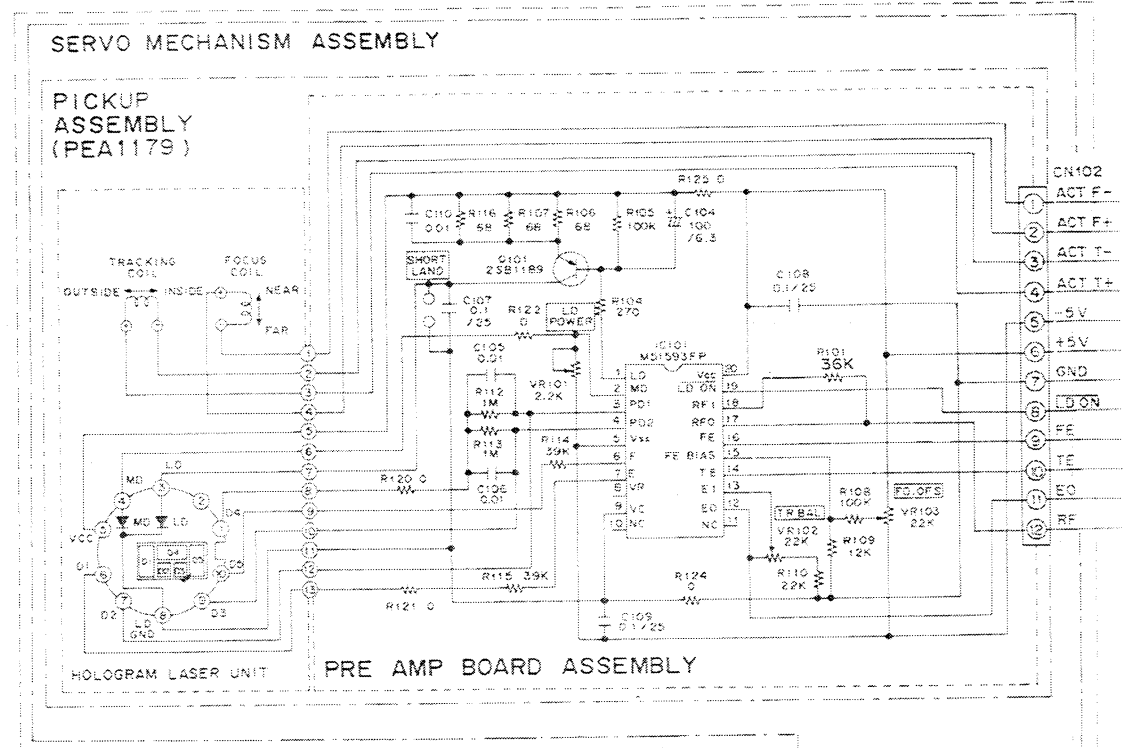

* 7

	CN351	CN701
PD-202	32pin	32pin
PD-102	30pin	30pin

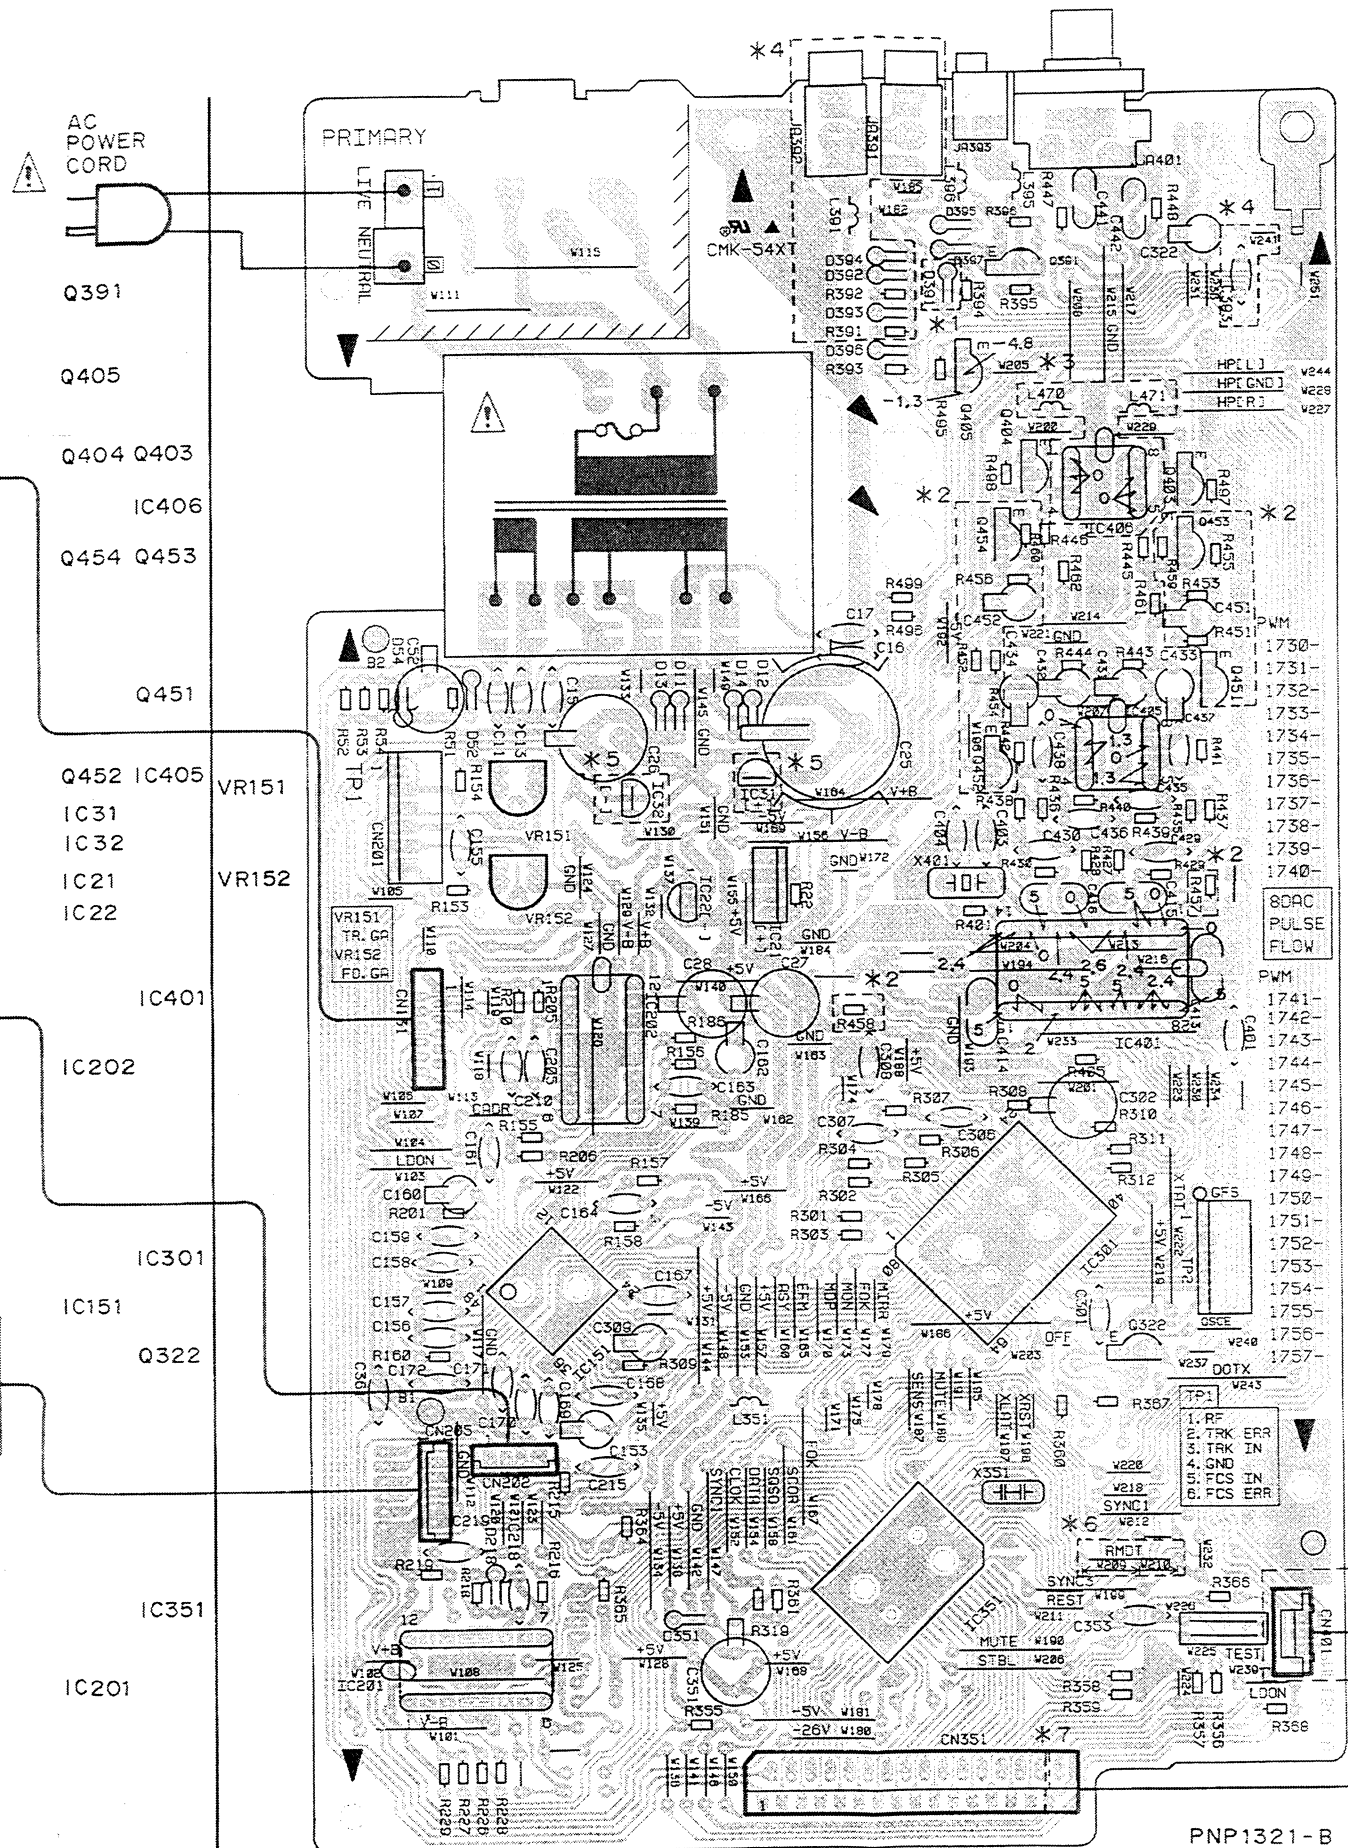

MOTHER BOARD AS
(PWM1730: PD-102/
(PWM1731: PD-102/
(PWM1732: PD-102/
(PWM1733: PD-102/
(PWM1734: PD-102/
(PWM1735: PD-202/
(PWM1736: PD-202/
(PWM1737: PD-202/

* 3
HEAD
ASSE

SWITC

FUNC
ASSE


PNP1321-B

MOTHER BOARD ASSEMBLY


(PWM1730:PD-102/KU, KC, KUXJ, KUXJS, KCXJ)
 (PWM1731:PD-102/WEMXJS, WBXJS)
 (PWM1732:PD-102/VPW)
 (PWM1733:PD-102/RD)
 (PWM1734:PD-102/WL)
 (PWM1735:PD-202/KU, KC, KUXJ, KUXJS, KCXJ)
 (PWM1736:PD-202/WEMXJS, WBXJS, VPW, WL)
 (PWM1737:PD-202/RD)

* 3

HEADPHONE BOARD ASSEMBLY

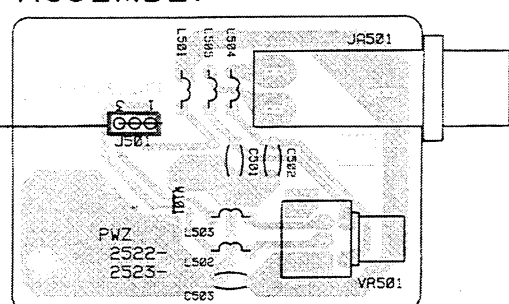


SWITCH BOARD ASSEMBLY

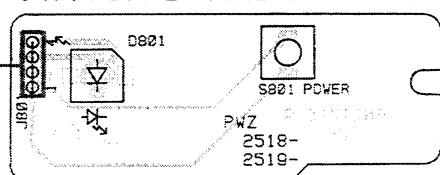

NOTE

- * 1: PD-202/KU, KC, KUXJ, KCXJ, KUXJ ONLY
- * 2: PD-202, PD-102/WEMXJS, WBXJS, WL ONLY
- * 3: PD-202, PD-102/KU, KC, KUXJ, KCXJ, WEMXJS, WBXJS, WL, KUXJS ONLY
- * 4: PD-202/KU, KC, KUXJ, KCXJ, KUXJ
 PD-102/KU, KC, KUXJ, KUXJS, KCXJ, WEMXJS, WBXJS, WL ONLY

FUNCTION BOARD (PWZ2510:PD-102) ASSEMBLY (PWZ2511:PD-202)

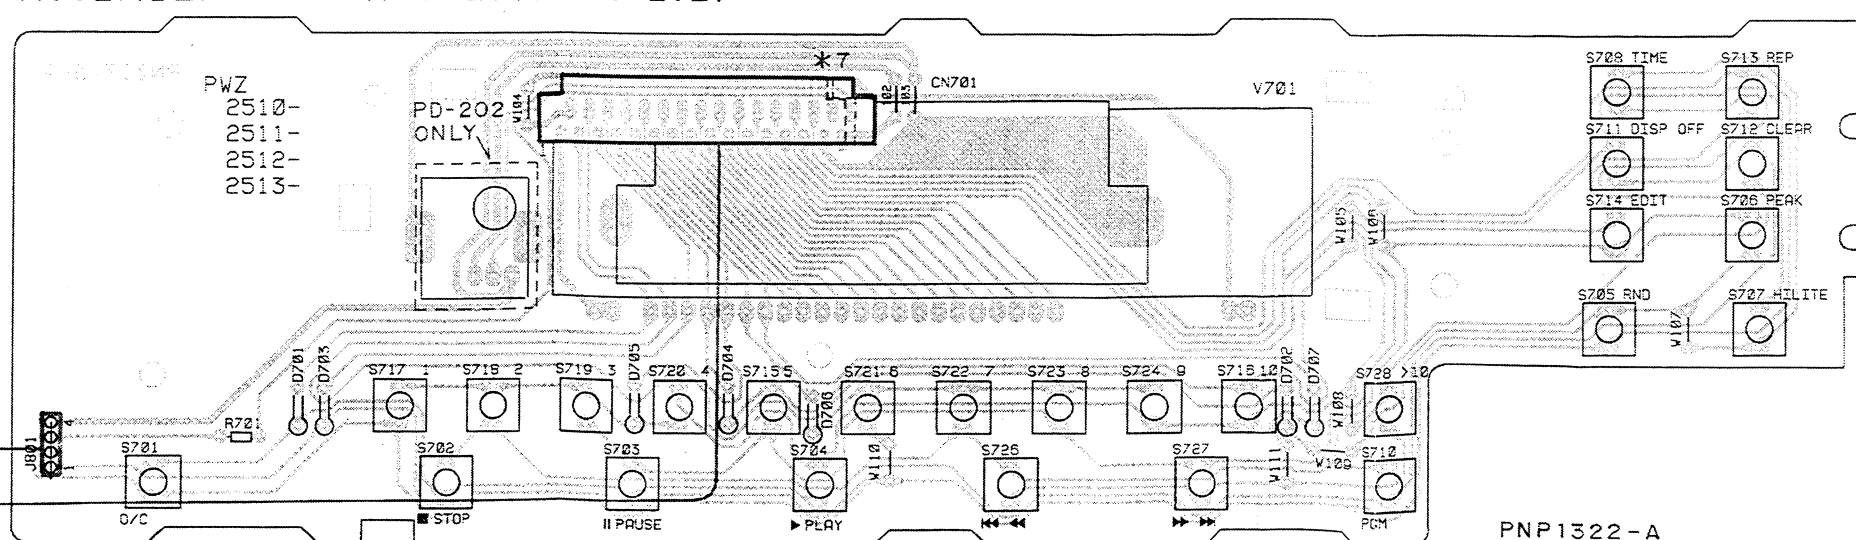

PNP1322-A

IC151 (CXA1372Q)

Pin No.	Voltage [V]	Pin No.	Voltage [V]
1	0	25	5.0
2	0	26	0
3	0	27	5.0
4	0	28	0
5	-0.3	29	0
6	0	30	-5.0
7	0.2	31	2.5
8	0	32	2.5
9	0	33	5.0
10	5.0	34	-1.5
11	0	35	-1.7
12	0	36	5.0
13	0	37	-0.7
14	0 to 1.2	38	-1.6
15	0	39	0
16	-4.0	40	0.8
17	1.3	41	-5.0
18	0	42	0
19	-5.0	43	0
20	5.0	44	0
21	5.0	45	0
22	5.0	46	0
23	5.0	47	0
24	5.0	48	0

IC301 (CXD250CBQ)

Pin No.	Voltage [V]	Pin No.	Voltage [V]	Pin No.	Voltage [V]	Pin No.	Voltage [V]
1	5.0	21	0	41	NC	61	NC
2	NC	22	2.5	42	5.0	62	NC
3	5.0	23	5.0	43	NC	63	0
4	2.6	24	2.5	44	NC	64	NC
5	NC	25	NC	45	NC	65	0
6	5.0	26	0	46	4.4	66	3.3 to 4.6
7	NC	27	2.5	47	0	67	5.0
8	NC	28	NC	48	0	68	0
9	0	29	0	49	0 to 0.1	69	2.1 to 3.0
10	0	30	NC	50	NC	70	5.0
11	NC	31	1.3 to 2.2	51	NC	71	5.0
12	0	32	2.5	52	0	72	5.0
13	NC	33	5.0	53	2.5	73	5.0
14	NC	34	2.5	54	NC	74	5.0
15	NC	35	NC	55	0	75	5.0
16	NC	36	NC	56	NC	76	0
17	0	37	NC	57	NC	77	5.0
18	2.5	38	NC	58	NC	78	5.0
19	2.4	39	NC	59	0	79	5.0
20	2.4	40	NC	60	NC	80	0

* 5

	KU, KC, KUXJ KUXJS, KCXJ	OTHERS
IC31	JUMPER	USED
IC32		

* 6


	W209	W210
PD-202/WEMXJS, WBXJS, WL, VPW, RD	UNUSED	USED
PD-102 PD-202/KU, KC, KUXJ, KUXJS, KCXJ	USED	UNUSED


P.C.B. pattern diagram indication	Corresponding part symbol	Part name	P.C.B. pattern diagram indication	Corresponding part symbol	Part name
		Transistor			Ceramic capacitor
		FET			Mylar capacitor
		Diode			Styrol capacitor
		Zenner diode			Electrolytic capacitor (Non polarized)
		LED			Electrolytic capacitor (Noiseless)
		Varactor			Electrolytic capacitor (Polarized)
		Tact switch			Power capacitor
		Inductor			Resistor array
		Coil			Resistor
		Transformer			Resonator
		Filter			Thermistor



- This P.C.B. connection diagram is viewed from the parts mounted side.
- The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the above Table.
- The capacitor terminal marked with shows negative terminal.
- The diode marked with shows cathode side.
- The transistor terminal marked with shows emitter.

IC351 (PD4457A)

Pin No.	Voltage [V]	Pin No.	Voltage [V]	Pin No.	Voltage [V]	Pin No.	Voltage [V]
1	5.0	17	-3.0 to -22.0	33	5.0	49	0
2	-24.0 to -22.0	18	-26.0	34	3.3 to 4.7	50	5.0
3	-24.0 to -22.0	19	-5.0	35	5.0	51	0
4	-24.0 to -22.0	20	-3.0 to -22.0	36	0	52	5.0
5	-24.0 to -22.0	21	-3.0 to -22.0	37	5.0	53	5.0
6	-24.0 to -22.0	22	-3.0 to -22.0	38	5.0	54	5.0
7	-24.0 to -22.0	23	-3.0 to -22.0	39	NC	55	0
8	-24.0 to -22.0	24	-3.0 to -22.0	40	NC	56	2.5
9	-24.0 to -22.0	25	-3.0 to -22.0	41	0	57	2.5
10	-24.0 to -22.0	26	5.0	42	0	58	0
11	-24.0 to -22.0	27	-3.0 to -22.0	43	NC	59	0
12	0	28	-3.0 to -22.0	44	NC	60	NC
13	0	29	-3.0 to -22.0	45	0	61	0
14	NC	30	-3.0 to -22.0	46	5.0	62	0
15	0	31	5.0	47	NC	63	0
16	-3.0 to -22.0	32	5.0	48	NC	64	0

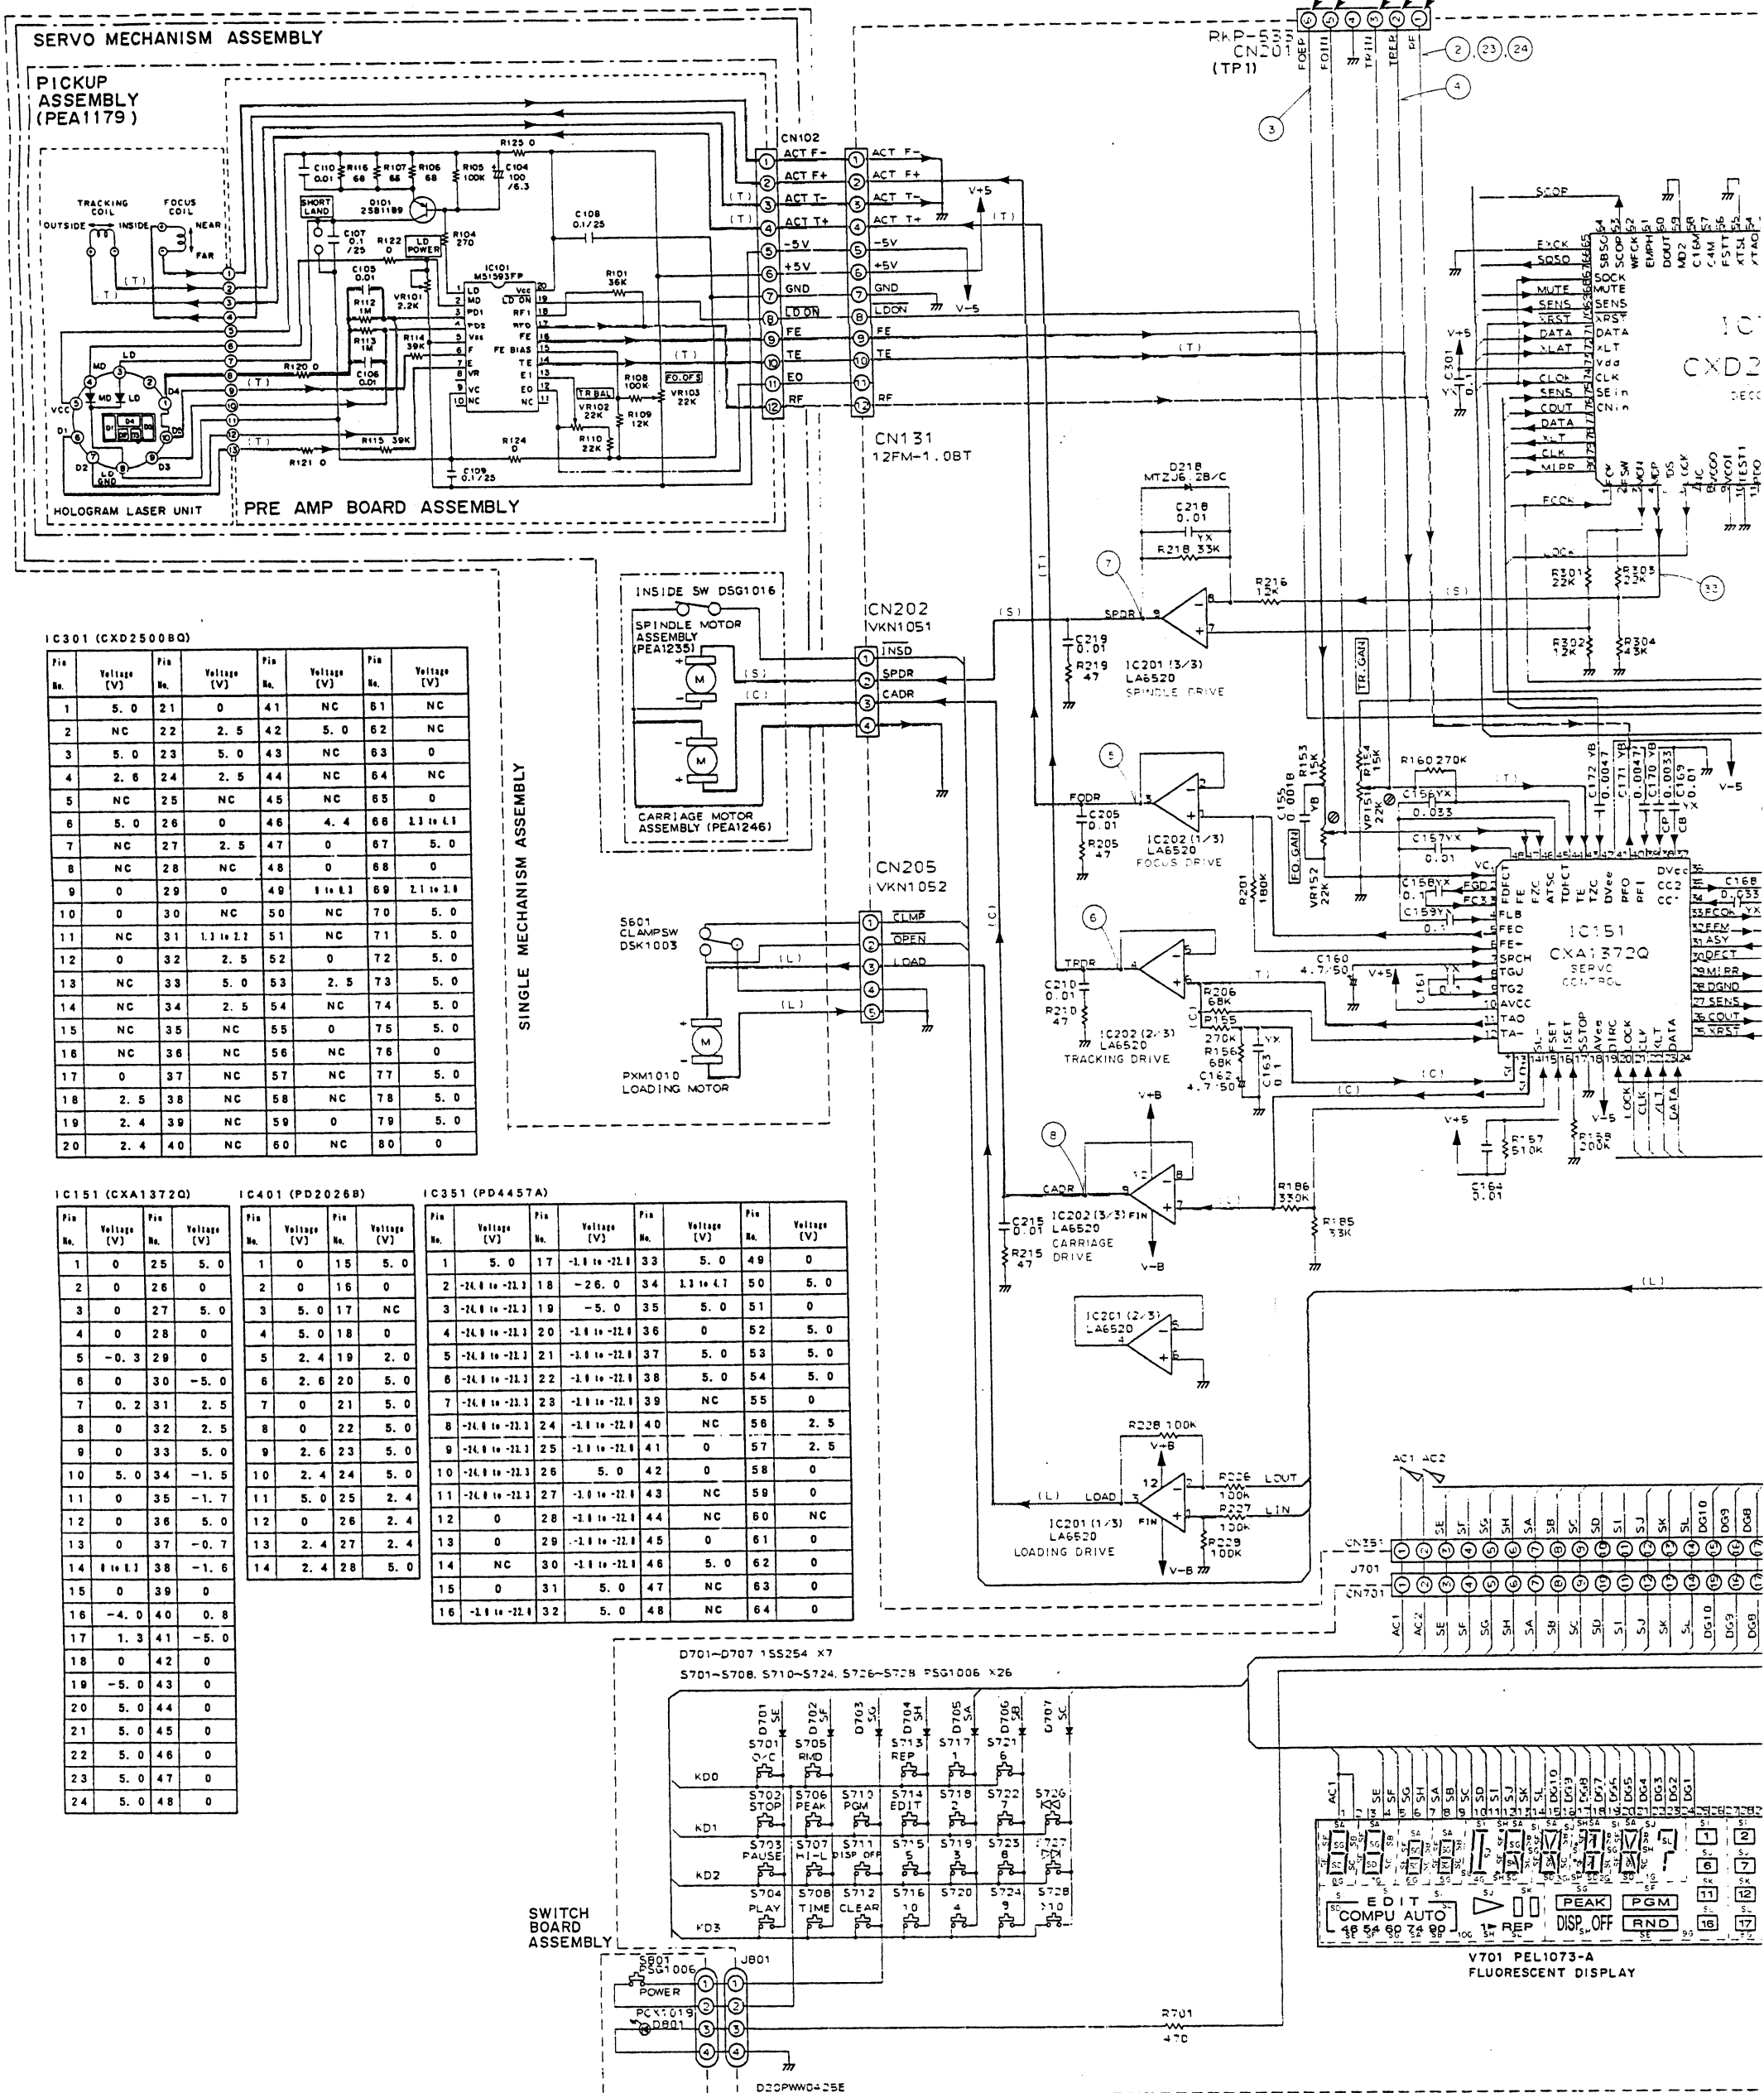

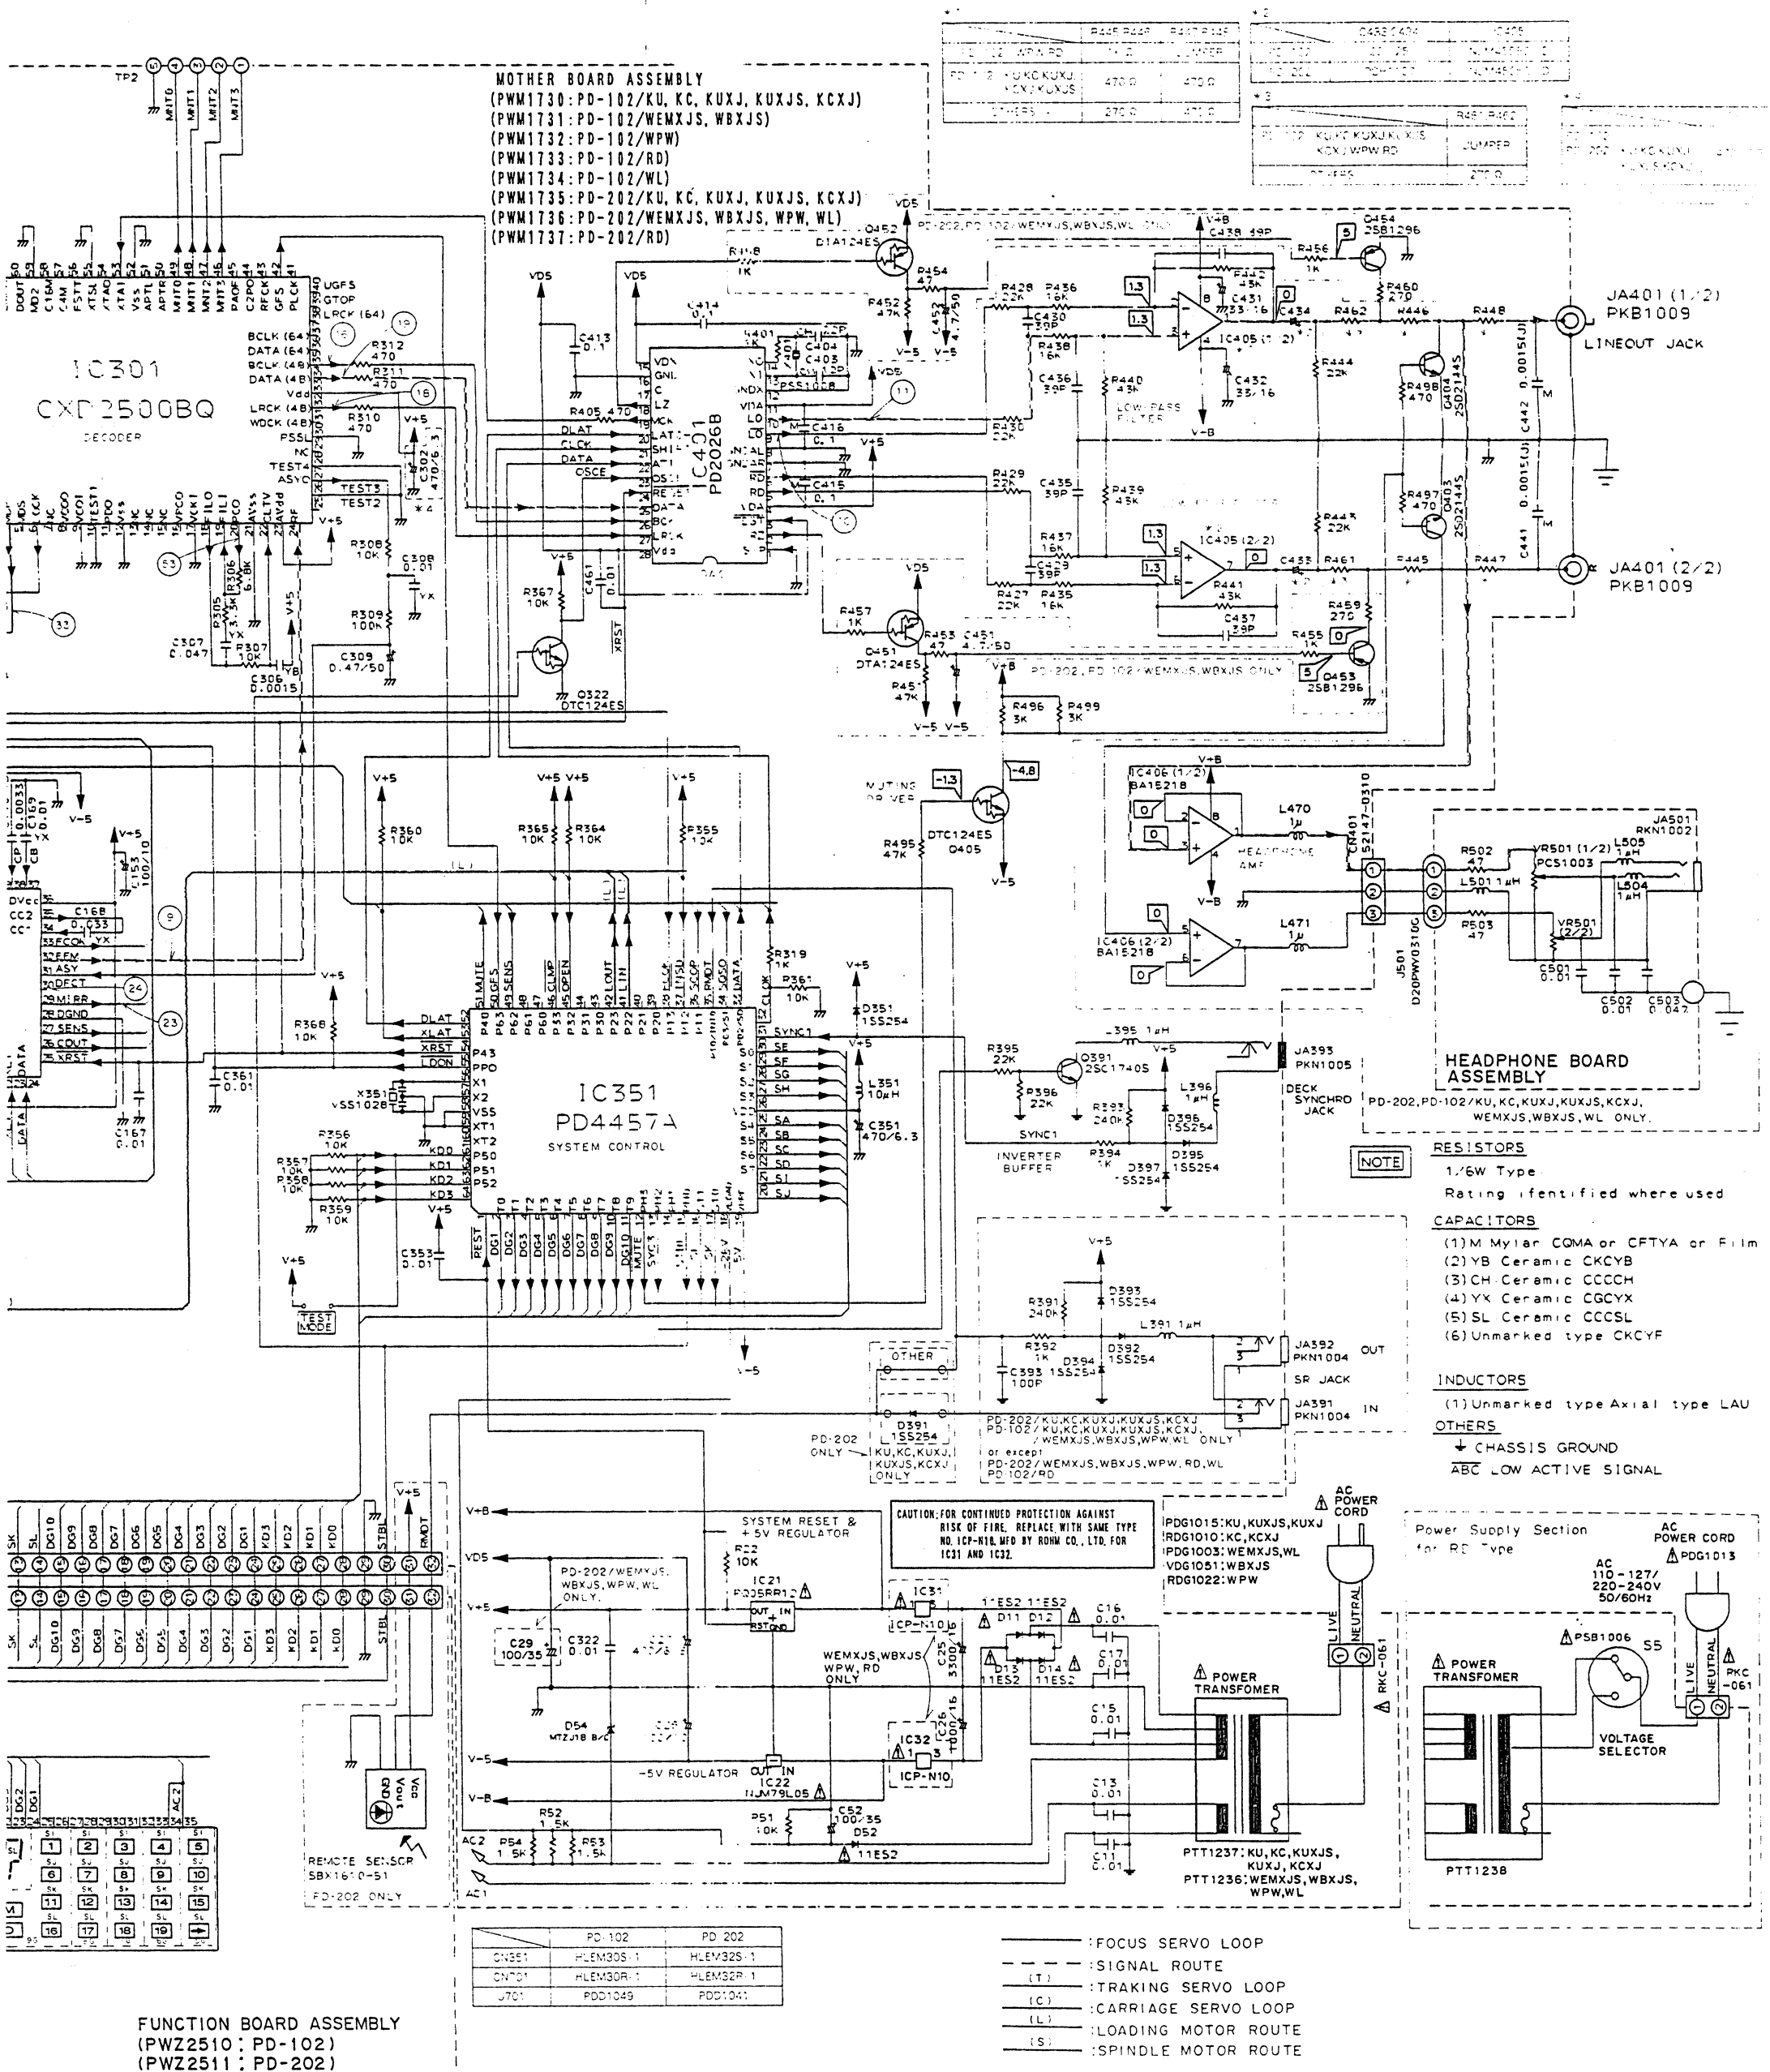

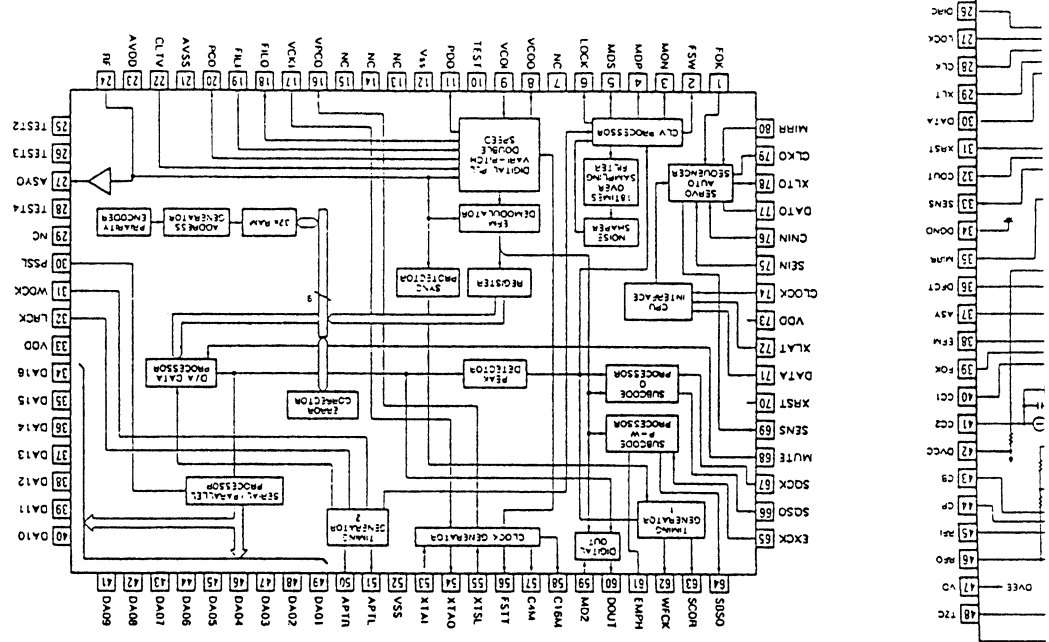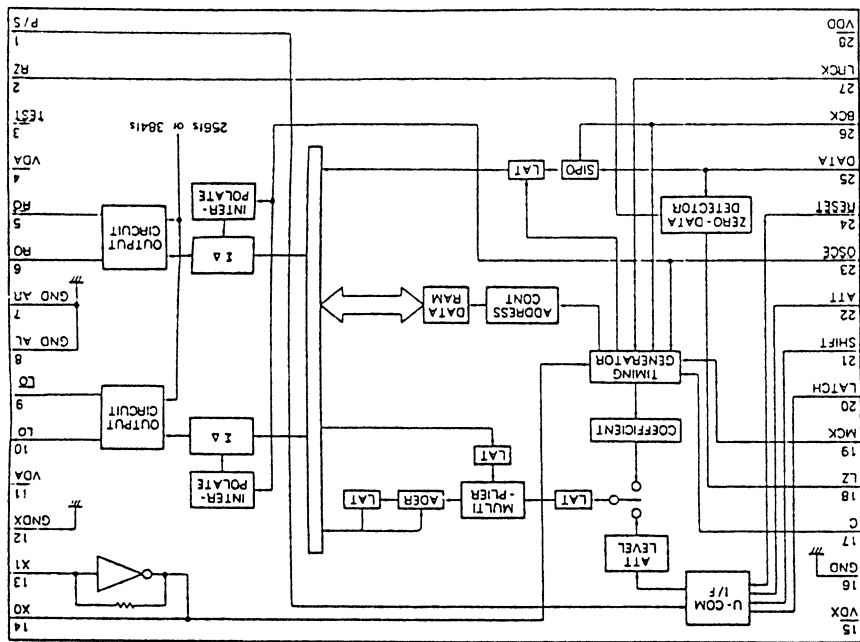




PD-202, PD-102

Wave Forms

Note: The encircled numbers denote measuring points in the schematic diagram.

*1 50T - JUMP: After switching to the pause mode, press the manual search key.
*2 FOCUS - IN: Press the key without loading a disc.

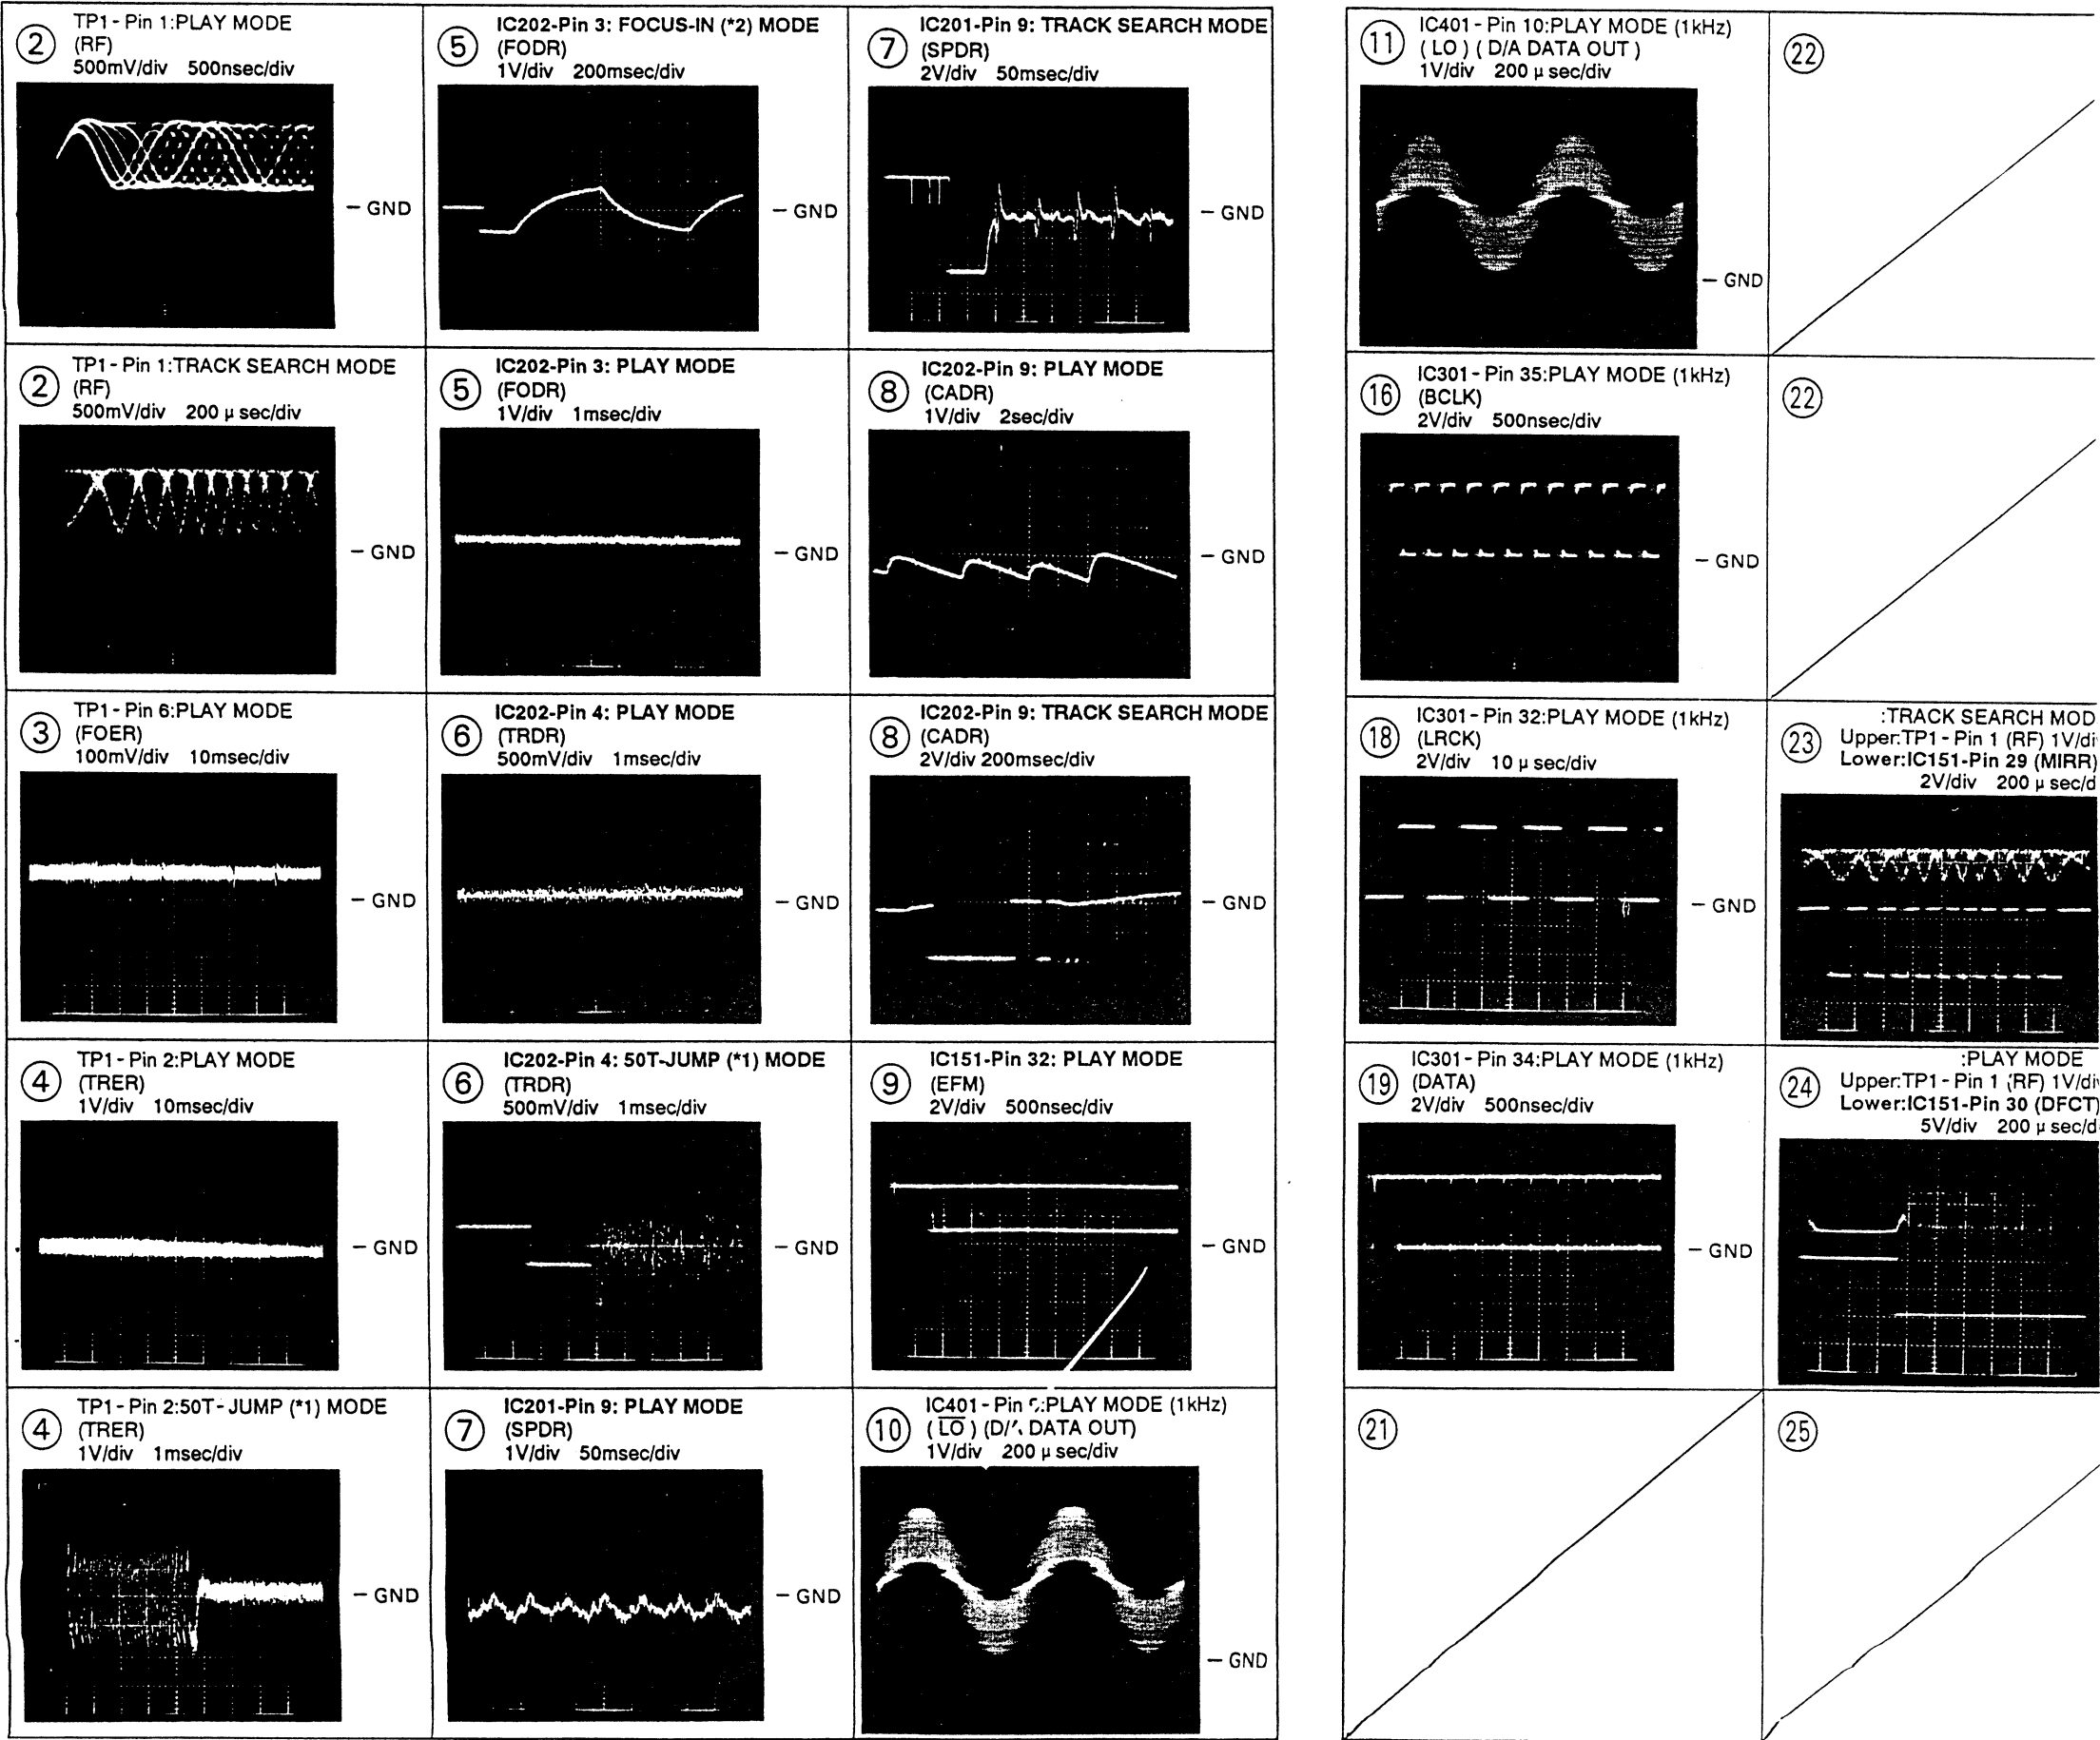

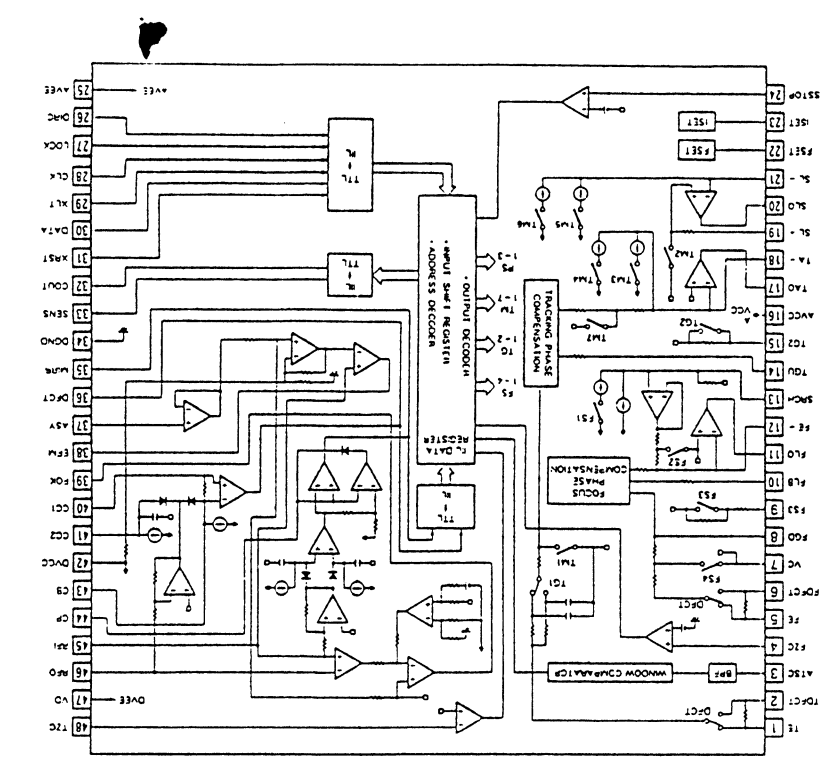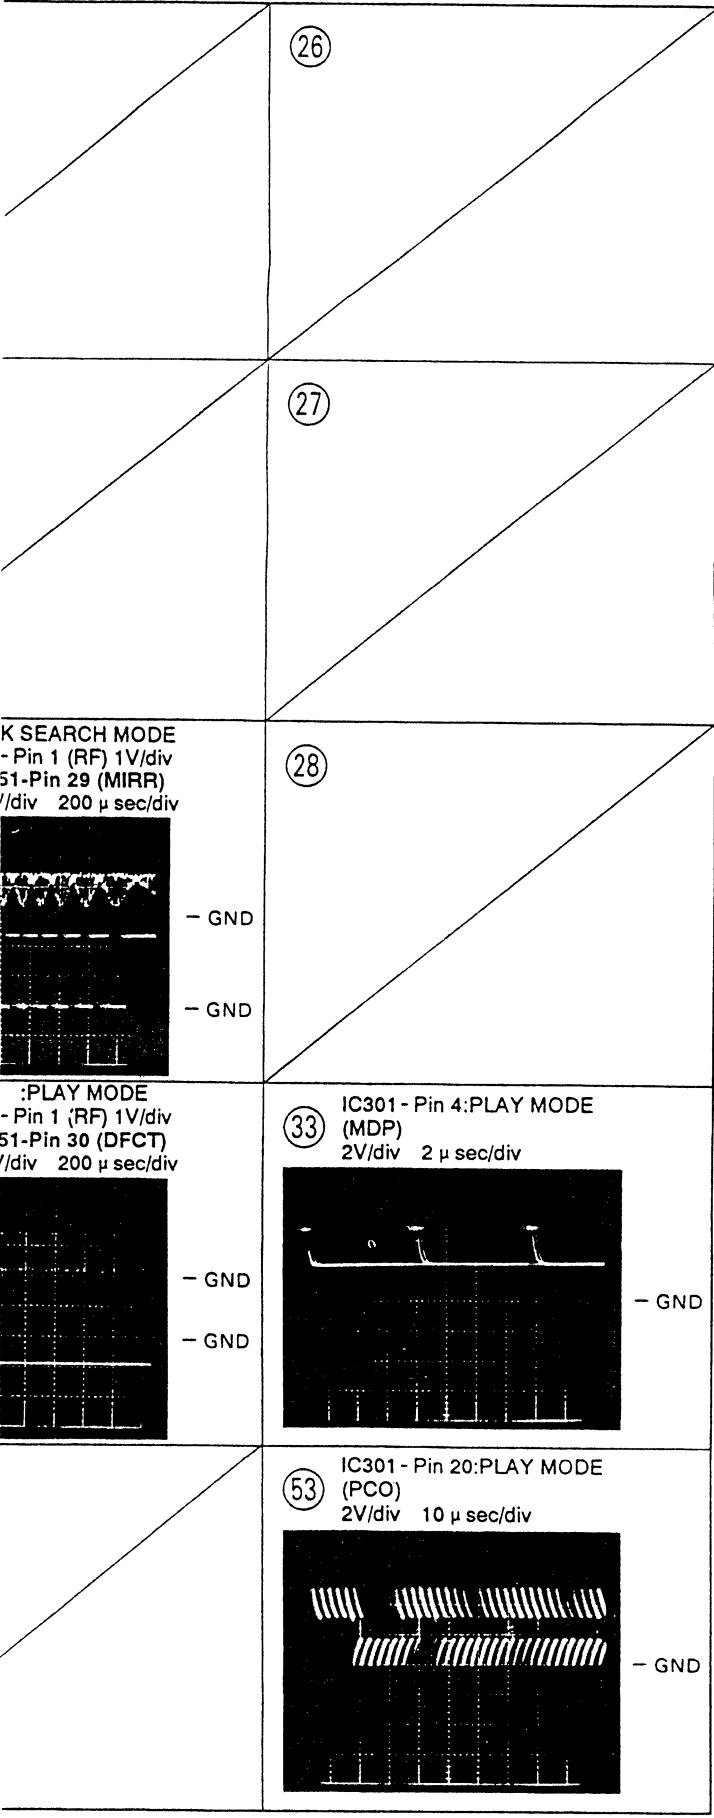

Note: 1. When ordering service parts, be sure to refer to "PARTS LIST of EXPLODED VIEWS" or "PCB PARTS LIST".

2. Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.

3. RESISTORS:
Unit: k: k Ω , M: M Ω , or Ω unless otherwise noted.
Rated power: 1/4W, 1/6W, 1/8W, 1/10W unless otherwise noted.
Tolerance: (F): $\pm 1\%$, (G): $\pm 2\%$, (K): $\pm 10\%$, (M): $\pm 20\%$ or $\pm 5\%$ unless otherwise noted.

4. CAPACITORS:
Unit: p: pF or μ F unless otherwise noted.
Rated voltage: 50V except for electrolytic capacitors.
Ratings: capacitor (μ F)/ voltage (V) unless otherwise noted.

5. COILS:
Unit: m: mH or μ H unless otherwise noted.

6. VOLTAGE AND CURRENT:
 : DC voltage (V) in PLAY mode unless otherwise noted.
 : DC current in PLAY mode unless otherwise noted.
 : mA or mV.
Value in () is DC current in STOP mode.

7. OTHERS:
 : Signal route.
 : Adjusting point.
 : Measurement point.
 : mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.

5. PCB PARTS LIST

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Parts marked by " $\odot$ " are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
 - When ordering resistors, first convert resistance values into code form as shown in the following examples.
- Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).
- 560 Ω $\rightarrow$ 56 $\times 10^1 \rightarrow$ 561 RD1/8PM J
- 47k Ω $\rightarrow$ 47 $\times 10^3 \rightarrow$ 473 RD1/4PS J
- 0.5 Ω $\rightarrow$ 0R5 RN2H K
- 1 Ω $\rightarrow$ 010 RS1P K
- Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).
- 5.62k Ω $\rightarrow$ 562 $\times 10^1 \rightarrow$ 5621 RN1/4PC F

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
LIST OF ASSEMBLIES							
$\odot$		MOTHER BOARD ASSEMBLY	PWM1735		C28, C153		CEAS101M10
NSP		SUB BOARD ASSEMBLY	PWX1262		C52		CEAS101M35
NSP		FUNCTION BOARD ASSEMBLY	PWZ2511		C26		CEAS102M16
NSP		SWITCH BOARD ASSEMBLY	PWZ2518		C431, C432		CEAS330M16
NSP		HEADPHONE BOARD ASSEMBLY	PWZ2522		C25		CEAS332M16
NSP		MECHANISM BOARD ASSEMBLY	PWX1192		C27, C302, C351		CEAS471M6R3
MOTHER BOARD ASSEMBLY					C160, C162, C451, C452		CEAS4R7M50
SEMICONDUCTORS					C309		CEASR47M50
	IC406	BA15218			C413-C416		CFTYA104J50
	IC151	CXA1372Q			C157, C164, C169, C218, C308		CGCYX103K25
	IC301	CXD2500BQ			C158, C159, C161, C163, C301		CGCYX104K25
$\triangle$	IC201, IC202	LA6520			C156, C168		CGCYX333K25
	IC405	NJM4565D-D			C307		CGCYX473K25
$\triangle$	IC22	NJM79L05A			C306		CKCYB152K50
	IC401	PD2026B			C155		CKCYB182K50
$\triangle$	IC351	PD4457A			C170		CKCYB332K50
	IC21	PQ05RR12			C171, C172		CKCYB472K50
	Q453, Q454	2SB1296			C11, C13, C15-C17, C167, C205,		CKCYF103Z50
	Q391	2SC1740S			C210, C215, C219, C322, C353, C361, C461		
	Q403, Q404	2SD2144S			C433, C434 (C=220, V(AC)=25)		PCH1107
	Q451, Q452	DTA124ES			C441, C442 (C=0.0015U, V(AC)=50V)		PCL1030
$\triangle$	Q322, Q405	DTC124ES		RESISTORS			
	D11-D14, D52	11ES2			VR151, VR152 (R=22K, W=0.1)		RCP1046
	D351, D391-D397	1SS254			OTHER RESISTORS		RD1/6PM
	D54	MTZJ18B		OTHERS			
	D218	MTZJ6.2B			CN131 CONNECTOR		12FM-1.0BT
COILS					CN351 32P FFC CONNECTOR		HLEM32S-1
	L391, L395, L396, L470, L471	LAU010K			JA401 2P PIN JACK		PKB1009
	L351	LAU100K			JA391, JA392 REMOTE CONTROL JACK		PKN1004
CAPACITORS					JA393 MINI JACK		PKN1005
	C403	CCCCH120J50			X401 CRYSTAL RESONATOR (16.9344MHz)		PSS1008
	C404	CCCCH220J50		$\triangle$	TERMINAL		RKC-061
	C429, C430, C435-C438	CCCCH390J50			X351 CERAMIC RESONATOR (4.19MHz)		VSS1028
	C393	CCCSL101J50		FUNCTION BOARD ASSEMBLY			
				SEMICONDUCTORS			
					D701-D707		1SS254

Mark	No.	Description	Part No.
------	-----	-------------	----------

SWITCHES

	S701-S708, S710-S724, S726-S728	PSG1006
--	---------------------------------	---------

RESISTORS

	ALL RESISTORS	RD1/6PM□□□J
--	---------------	-------------

OTHERS

	CN701 32P FFC CONNECTOR	HLEM32R-1
	V701 FL INDICATOR TUBE	PEL1073
	REMOTE CONTROL SENSOR	SBX1610

SWITCH BOARD ASSEMBLY**SEMICONDUCTORS**

	D801	PCX1019
--	------	---------

SWITCHES

	S801	PSG1006
--	------	---------

HEADPHONE BOARD ASSEMBLY**COILS**

	L501, L504, L505	LAU010K
--	------------------	---------

CAPACITORS

	C501, C502	CKCYF103Z50
	C503	CKCYF473Z50

RESISTORS

	VR501	PCS1003
	OTHER RESISTORS	RD1/6PM□□□J

OTHERS

	JA501 HEADPHONE JACK	RKN1002
--	----------------------	---------

MECHANISM BOARD ASSEMBLY**SWITCHES**

	S610	DSG1016
--	------	---------

6. ADJUSTMENTS

● Adjustment Methods

If a disc player is adjusted incorrectly or inadequately, it may malfunction or not work at all even though there is nothing at all wrong with the pickup or the circuitry. Adjust correctly following the adjustment procedure.

● Adjustment Items/Verification Items and Order

If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in steps 1 – 4, the pickup block may be defective.

Step	Item	Test Point	Adjustment Location
1	Focus offset verification	TP1, Pin 6(FCS. ERR)	None
2	Tracking error balance verification	TP1, Pin 2(TRK. ERR)	None
3	Pickup radial/tangential direction tilt adjustment	TP1, Pin 1(RF)	Radial tilt adjustment screw, Tangential tilt adjustment screw
4	RF level verification	TP1, Pin 1(RF)	None
5	Focus servo loop gain adjustment	TP1, Pin 5(FCS. IN) TP1, Pin 6(FCS. ERR)	VR152(FCS. GAN)
6	Tracking servo loop gain adjustment	TP1, Pin 3(TRK. IN) TP1, Pin 2(TRK. ERR)	VR151 (TRK. GAN)

● Abbreviation table

FCS. ERR	:Focus Error
TRK. ERR	:Tracking Error
FCS GAN	:Focus Gain
TRK GAN	:Tracking Gain
FCS. IN	:Focus In
TRK. IN	:Tracking In

● Measuring Instruments and Tools

1. Dual trace oscilloscope (10:1 probe)
2. Low-frequency oscillator
3. Test disc (YEDS-7)
4. 8cm disc (With at least about 20 minutes of recording)
5. Low-pass filter ($39\text{k}\Omega + 0.001\ \mu\text{F}$)
6. Resistor ($100\text{k}\Omega$)
7. Ball point hexagon wrench (GGK1002)
8. Standard tools

● Test Point and Adjustment Variable Resistor Positions

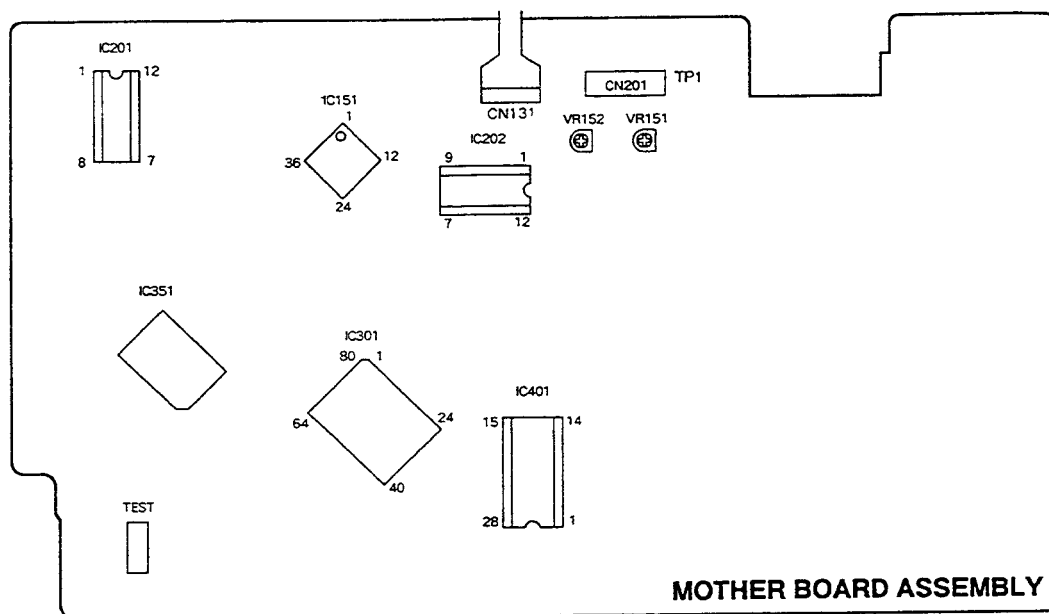


Figure 1 Adjustment Locations

● Notes

1. Use a 10:1 probe for the oscilloscope.
2. All the knob positions (settings) for the oscilloscope in the adjustment procedures are for when a 10:1 probe is used.

● Test Mode

These models have a test mode so that the adjustments and checks required for service can be carried out easily. When these models are in test mode, the keys on the front panel work differently from normal. Adjustments and checks can be carried out by operating these keys with the correct procedure. For these models, all adjustments are carried out in test mode.

[Setting these models to test mode]

How to set this model into test mode.

1. Unplug the power cord from the AC socket.
2. Short the test mode jumper wires. (See Figure 1.)
3. Plug the power cord back into the AC socket.

When the test mode is set correctly, the display is different from what it usually is when the power is turned on. If the display is still the same as usual, test mode has not been set correctly, so repeat Steps 1 – 3.

[Release from test mode]

Here is the procedure for releasing the test mode:

1. Press the STOP key and stop all operations.
2. Unplug the power cord from the AC socket.

[Operations of the keys in test mode]


Code	Key Name	Function in Test Mode	Explanation
	PROGRAM	Focus servo close	The laser diode is lit up and the focus actuator is lowered, then raised slowly and the focus servo is closed at the point where the objective lens is focused on the disc. With the player in this state, if you lightly rotate the stopped disc by hand, you can hear the sound the focus servo. If you can hear this sound, the focus servo is operating correctly. If you press this key with no disc mounted, the laser diode lights up, the focus actuator is pulled down, then the actuator is raised and lowered three times and returned to its original position.
▶	PLAY	Spindle servo ON	Starts the spindle motor in the clockwise direction and when the disc rotation reaches the prescribed speed (about 500 rpm at the inner periphery), sets the spindle servo in a closed loop. Be careful. Pressing this key when there is no disc mounted makes the spindle motor run at the maximum speed. If the focus servo does not go correctly into a closed loop or the laser light shines on the mirror section at the outermost periphery of the disc, the same symptom is occurred.
	PAUSE	Tracking servo close/open	Pressing this key when the focus servo and spindle servo are operating correctly in closed loops puts the tracking servo into a closed loop, displays the track number being played back and the elapsed time on the front panel, and outputs the playback signal. If the elapsed time is not displayed or not counted correctly or the audio is not played back correctly, it may be that the laser is shining on the section with no sound recorded at the outer edge of the disc, that something is out of adjustment, or that there is some other problem. This key is a toggle key and open/close the tracking servo alternately. This key has no effect if no disc is mounted.

Code	Key Name	Function in Test Mode	Explanation
	MANUAL TRACK SEARCH REV	Carriage reverse (inwards)	Moves the pickup position toward the inner diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
	MANUAL TRACK SEARCH FWD	Carriage forward (outwards)	Moves the pickup position toward the outer diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
	STOP	Stop	Switches off all the servos and initialized. The pickup remains where it was when this key was pressed.
	OPEN/CLOSE	Disc tray open/close	Open/close the disc tray. This key is a toggle key and open/close tray alternately. Pressing this key when the disc is turning stops the disc, then opens the tray. This key operation does not affect the position of the pickup.

[How to play back a disc in test mode]

In test mode, since the servos operate independently, playing back a disc requires that you operate the keys in the correct order to close the servos.

Here is the key operation sequence for playing back a disc in test mode.

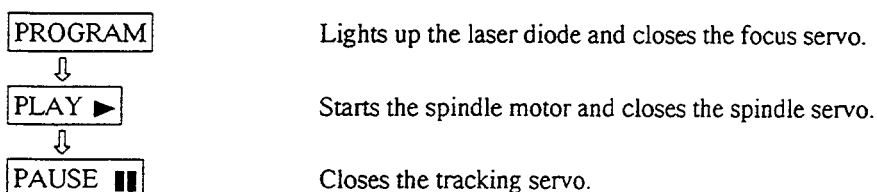

Wait at least 2-3 seconds between each of these operations.

1. Focus Offset Verification

● Objective	Verify the DC offset for the focus error amp.		
● Symptom when out of adjustment	The model does not focus in and the RF signal is dirty.		
● Measurement instrument connections	Connect the oscilloscope to TP1, Pin 6 (FCS. ERR)	● Player state	Test mode, stopped (just the Power switch on)
	[Settings] 5 mV/division 10 ms/division DC mode	● Adjustment location	None
		● Disc	None needed
[Procedure] Verify the DC voltage at TP1, Pin 6 (FCS. ERR) is 0 ± 50 mV.			

Note : If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in adjustment items 1 – 4, the pickup block may be defective.

2. Tracking Error Balance Verification


● Objective	To verify that there is no variation in the sensitivity of the tracking photo diode.		
● Symptom when out of adjustment	Play does not start or track search is impossible.		
● Measurement instrument connections	Connect the oscilloscope to TP1, Pin 2 (TRK. ERR). This connection may be via a low pass filter. [Settings] 50 mV/division 5 ms/division DC mode	● Player state ● Adjustment location ● Disc	Test mode, focus and spindle servos closed and tracking servo open None YEDS-7

[Procedure]


1. Move the pickup to midway across the disc (R=35 mm) with the MANUAL TRACK SEARCH FWD $\blacktriangleright\blacktriangleright$ • $\blacktriangleright\blacktriangleright$ or REV $\blacktriangleleft\blacktriangleleft$ • $\blacktriangleleft\blacktriangleleft$ key.
2. Press the PROGRAM key, then the PLAY $\blacktriangleright$ key in that order to close the focus servo then the spindle servo.
3. Line up the bright line (ground) at the center of the oscilloscope screen and put the oscilloscope into DC mode.
4. Supposing that the positive amplitude of the tracking error signal at TP1, pin 2 (TRK ERR) is (A) and the negative amplitude is (B), the following expression is satisfied.

$$\text{When } A \geq B, \frac{A-B}{C} \times \frac{1}{2} \leq 0.1$$

$$\text{When } A < B, \frac{B-A}{C} \times \frac{1}{2} \leq 0.1$$

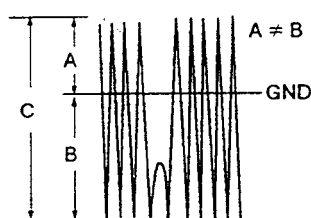

When there is a DC component

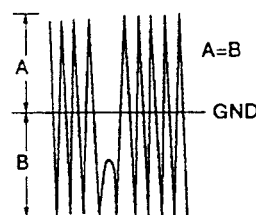

When there is no DC component

3. Pickup Radial/Tangential Tilt Adjustment

● Objective	To adjust the angle of the pickup relative to the disc so that the laser beams are shone straight down into the disc for the best read out of the RF signals.		
● Symptom when out of adjustment	Sound broken; some discs can be played but not others.		
● Measurement instrument connections	Connect the oscilloscope to TP1, Pin 1 (RF). [Settings] 20 mV/division 200 ns/division AC mode	● Player state ● Adjustment location ● Disc	Test mode, play Pickup radial tilt adjustment screw and tangential tilt adjustment screw 8 cm disc (However, those with approx. 20 min of audio signal (music).)

[Procedure]

1. Press the MANUAL TRACK SEARCH FWD ►► • ►► or REV ◄◄ • ◄◄ key to move the pickup to the external circumference of the disc.
Press the PROGRAM key, the PLAY ► key, then the PAUSE ■■ key in that order to close the respective servos and put the player into play mode.
2. First, adjust the radial tilt adjustment screw with the hexagon wrench (GGK1002) so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly.
3. Next, adjust the tangential tilt adjustment screw with the hexagon wrench (GGK1002) so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly (Figure 3).
※ The ball-point type hexagonal wrench is used because the disc will get in the way if a normal hexagonal wrench is used.
4. Adjust the radial tilt adjustment screw and the tangential tilt adjustment screw again so that the eye pattern can be seen the most clearly. As necessary, adjust the two screws alternately so that the eye pattern can be seen the most clearly.
5. When the adjustment is completed, lock the radial and tangential adjustment screw.

Note: Radial and tangential mean the directions relative to the disc shown in Figure 2.

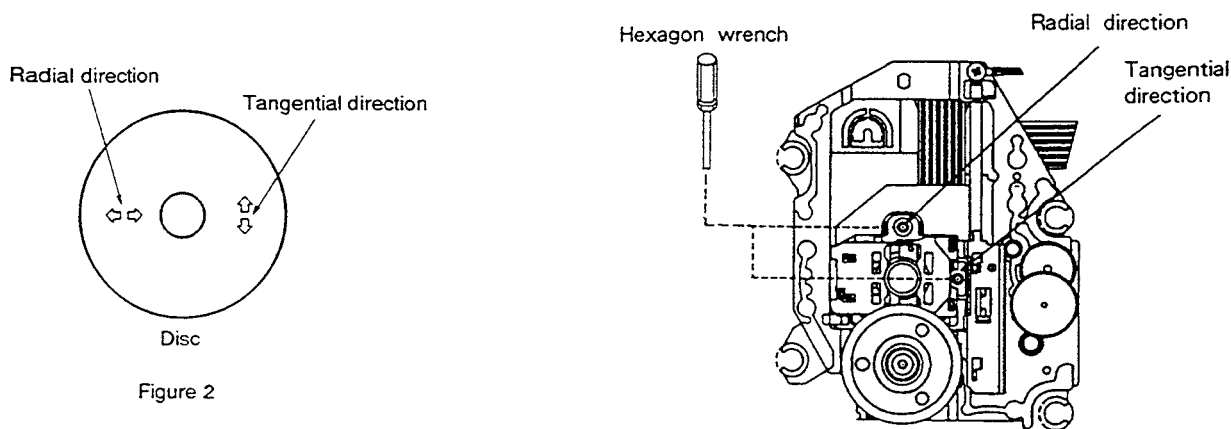


Figure 2

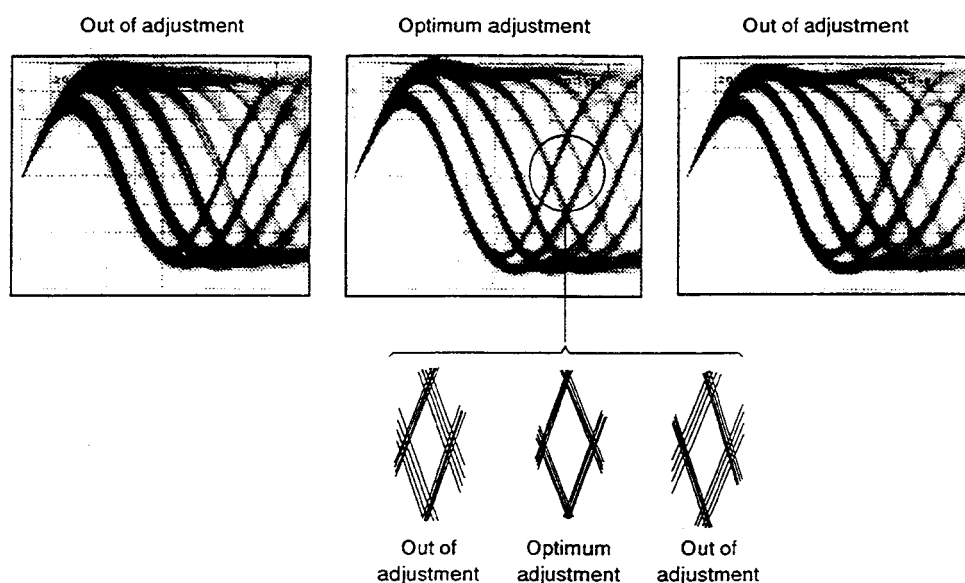


Figure 3 Eye pattern

4. RF Level Verification

● Objective	To verify the playback RF signal amplitude		
● Symptom when out of adjustment	No play or no search		
● Measurement instrument connections	Connect the oscilloscope to TP1, Pin 1 (RF).	● Player state	Test mode, play
	[Settings] 50 mV/division 10 ms/division AC mode	● Adjustment location	None
		● Disc	YEDS-7
[Procedure] 1. Move the pickup to midway across the disc (R=35 mm) with the MANUAL TRACK SEARCH FWD ►► • ►► or REV ◄◄ • ◄◄ key, then press the PROGRAM key, the PLAY ► key, then the PAUSE ■■ key in that order to close the respective servos and put the player into play mode. 2. Verify the RF signal amplitude is $1.2 \text{ V}_{p-p} \pm 0.2 \text{ V}$.			

5. Focus Servo Loop Gain Adjustment

● Objective	To optimize the focus servo loop gain.		
● Symptom when out of adjustment	Playback does not start or focus actuator noisy.		
● Measurement instrument connections	See figure 4.	● Player state	Test mode, play
	[Settings]	● Adjustment location	VR152 (FCS. GAN)
	CH1 CH2 20 mV/division 5 mV/division X - Y mode	● Disc	YEDS-7

[Procedure]

1. Set the AF generator output to 1.2 kHz and 1 Vp-p.
2. Press the MANUAL TRACK SEARCH FWD ►► • ►► or REV ◀◀ • ◀◀ key to move the pickup to halfway across the disc (R=35 mm), then press the PROGRAM key, the PLAY ► key, then the PAUSE ■■ key in that order to close the corresponding servos and put the player into play mode.
3. Adjust VR152 (FCS. GAN) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.



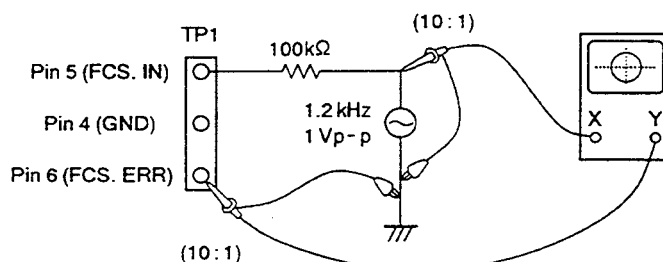


Figure 4


Focus Gain Adjustment

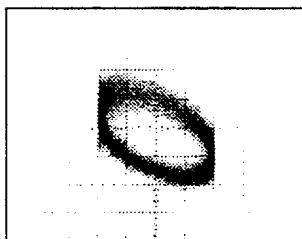

Higher gain

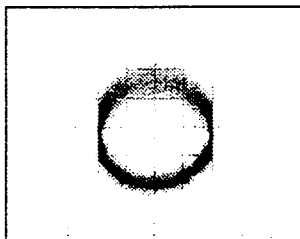

Optimum gain

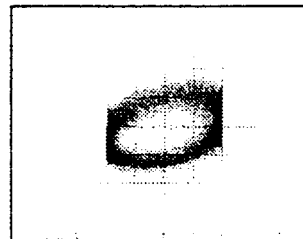

Lower gain

6. Tracking Servo Loop Gain Adjustment

● Objective	To optimize the tracking servo loop gain.		
● Symptom when out of adjustment	Playback does not start, during searches the actuator is noisy, or tracks are skipped.		
● Measurement instrument connections	See Figure 5.	● Player state	Test mode, play
	[Settings] CH1 CH2 50 mV/division 20 mV/division X-Y mode	● Adjustment location	VR151 (TRK. GAN)
		● Disc	YEDS-7

[Procedure]

1. Set the AF generator output to 1.2 kHz and 2 Vp-p.
2. Press the MANUAL TRACK SEARCH FWD ►► • ►► or REV ◀◀ • ◀◀ key to move the pickup to halfway across the disc (R=35 mm), then press the PROGRAM key, the PLAY ► key, then the PAUSE || key in that order to close the corresponding servos and put the player into play mode.
3. Adjust VR151 (TRK. GAN) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.



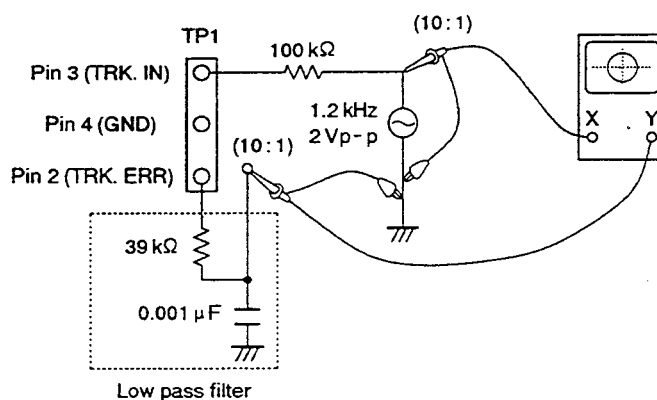


Figure 5


Tracking Gain Adjustment

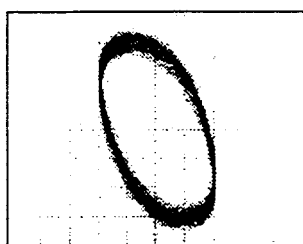

Higher gain

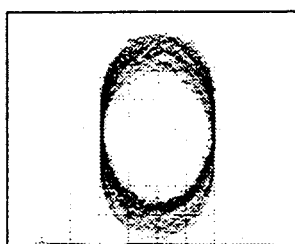

Optimum gain

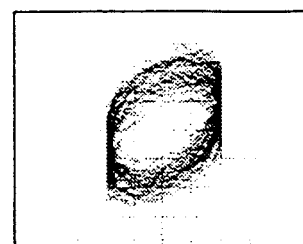

Lower gain


7. IC INFORMATION

- The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

■ PD4457A (IC351)

• System Control


• Pin Arrangement (Top view)

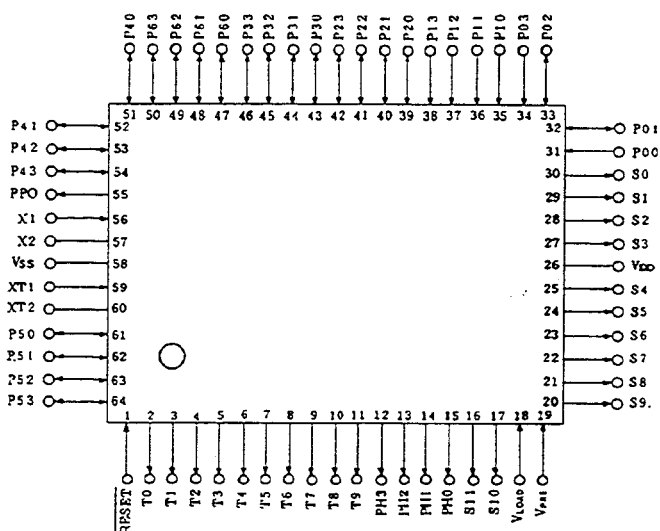

• Pin Function

No.	Pin Name	Function
1	RESET	Reset input.
2-11	T0-T9	Digit output.
12-15	PH3-PH0	Port H.
16,17	S11,S10	Segment output.
18	VLOAD	Power supply terminal for FIP driver.
19	VPRE	Power supply terminal for FIP driver.
20-25	S9-S4	Segment output.
26	Vdd	+ Power supply terminal.
27-30	S3-S0	Segment output.
31-34	P00-P03	Port 0.
35-38	P10-P13	Port 1.
39-42	P20-P23	Port 2.
43-46	P30-P33	Port 3.
47-50	P60-P63	Port 6.
51-54	P40-P43	Port 4.
55	PPO	Pulse output.
56,57	X1,X2	Clock oscillation terminal of Main system.
58	Vss	Ground
59,60	XT1,XT2	Clock oscillation terminal of Sub system.
61-64	P50-P53	Port 5.

• Block Diagram

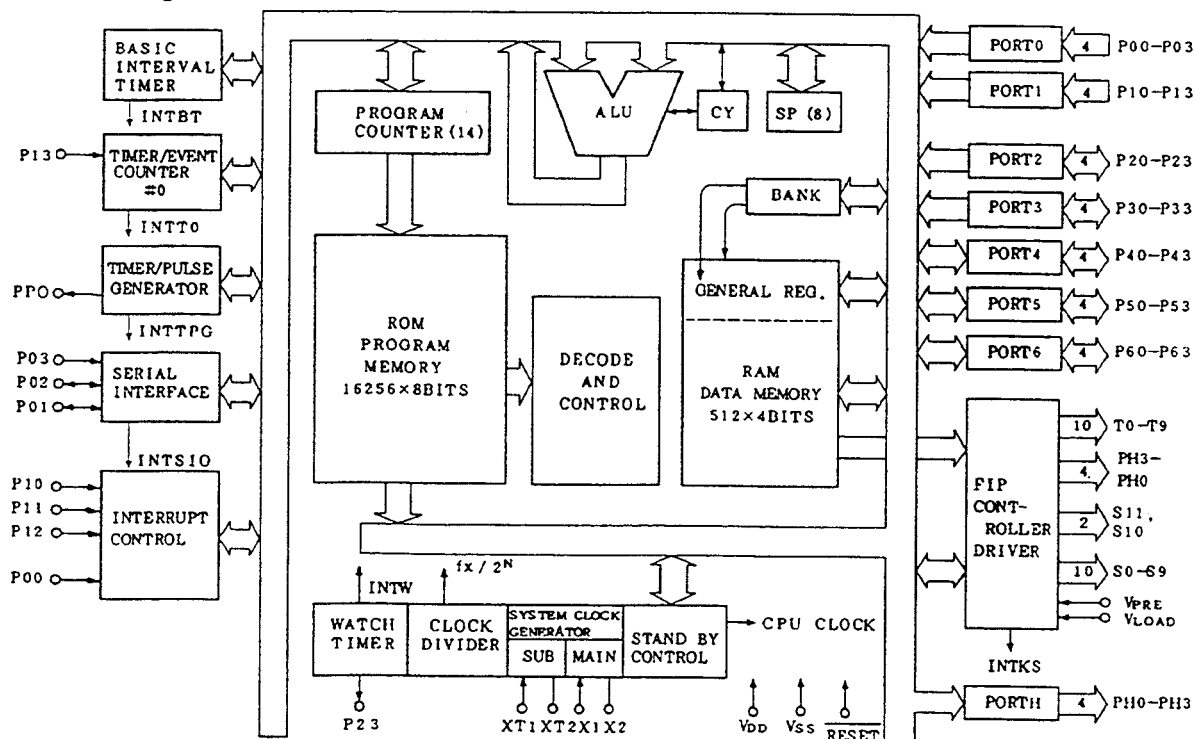

8. FOR PD-202/KUXJ, KUXJS, KC, KCXJ,WEMXJS, WBXJS, WPW, RD AND WL TYPES

CONTRAST OF MISCELLANEOUS PARTS

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Parts marked by "" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

PD-202/KUXJ, KUXJS, KC, KCXJ, WEMXJS, WBXJS, WPW, RD, WL and KU have the same construction except for the following:

Mark	Symbol & Description	Part No.									
		KU type	KUXJ type	KUXJS type	KC type	KCXJ type	WEMXJS type	WBXJS type	WPW type	RD type	WL type
	Mother board assembly	PWM1735	PWM1735	PWM1735	PWM1735	PWM1735	PWM1736	PWM1736	PWM1736	PWM1737	PWM1736
	Cord stopper	CM – 22C	CM – 22C	CM – 22C	CM – 22	CM – 22	CM – 22B	CM – 22B	CM – 22B	CM – 22B	CM – 22B
	AC power cord	PDG1015	PDG1015	PDG1015	RDG1010	RDG1010	PDG1003	VDG1051	RDG1022	PDG1013	PDG1003
	Power transformer (AC120V)	PTT1237	PTT1237	PTT1237	PTT1237	PTT1237					
	Power transformer (AC120 – 240V)						PTT1236	PTT1236	PTT1236		PTT1236
	Power transformer (AC110 – 127/220 – 240V)									PTT1238	
	Function panel assembly	PEA1267	PEA1267		PEA1267	PEA1267	PEA1267	PEA1267			
	Display window	PAM1599	PAM1599	PAM1599	PAM1599	PAM1599	PAM1602	PAM1602	PAM1599	PAM1599	PAM1599
	Insulator	PNW1912	PNW1912	PNW1912	PNW1912	PNW1912	PNW1912	PNW1912			
	Foot assembly								PXA1201	PXA1201	PXA1201
NSP	Rear base	PNA1921	PNA1952	PNA2013	PNA1953	PNA1954	PNA1955	PNA1956	PNA1958	PNA1957	PNA2032
NSP	65 label	ORW1069	ORW1069	ORW1069							
	CD Packing case	PHG1877	PHG1892	PHG1949	PHG1893	PHG1894	PHG1895	PHG1896	PHG1898	PHG1897	PHG1898
	Operating instructions (French)				PRC1054	PRC1054					
	Operating instructions (English)	PRB1182	PRB1182	PRB1182	PRB1182	PRB1182		PRB1182	PRB1182	PRB1182	PRB1182
	Operating instructions (English/French/German/Italian/Dutch/Spanish/Swedish/Portuguese)						PRE1176				
	Operating instructions (Spanish)									PRC1057	
	Connection cord with mini plug	PDE – 319	PDE – 319	PDE – 319	PDE – 319	PDE – 319					
	Protector (R)	PHA1240	PHA1260	PHA1260	PHA1240	PHA1260	PHA1260	PHA1254	PHA1240	PHA1240	PHA1240

MOTHER BOARD ASSEMBLY

PWM1736, PWM1737 and PWM1735 have the same construction except for the following:

Mark	Symbol & Description	Part No.			Remarks
		PWM1735	PWM1736	PWM1737	
	IC31, IC32 D391 – D394 S5 (Voltage selector) L391 C393	 1SS254 LAU010K CCCSL101J50	ICP – N10	ICP – N10 PSB1006	
	C29 C302 R391 R392 JA391, JA392 Remote control jack	 CEAS471M6R3 RD1/6PM244J RD1/6PM102J PKN1004	CEAS101M35 CEAS102M6R3		

9. FOR PD-102/KU, KUXJ, KUXJS, KC, KCXJ, WEMXJS, WBXJS, RD AND WL TYPES

CONTRAST OF MISCELLANEOUS PARTS

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

PD-102/KU, KUXJ, KUXJS, KC, KCXJ, WEMXJS, WBXJS, WPW, RD, WL and PD-202/KU have the same construction except for the following:

Mark	Symbol & Description	Part No.										
		PD-202/ KU type	PD-102/ KU type	PD-102/ KUXJ type	PD-102/ KUXJS type	PD-102/ KC type	PD-102/ KCXJ type	PD-102/ WEMXJS type	PD-102/ WBXJS type	PD-102/ WPW TYPE	PD-102/ RD type	PD-102/ WL type
⊙	Mother board assembly	PWM1735	PWM1730	PWM1730	PWM1730	PWM1730	PWM1730	PWM1731	PWM1731	PWM1732	PWM1733	PWM1734
NSP	Sub board assembly	PWX1260	PWX1260	PWX1260	PWX1260	PWX1260	PWX1260	PWX1260	PWX1260	PWX1261	PWX1261	PWX1260
	Function board assembly	PWZ2511	PWZ2510	PWZ2510	PWZ2510	PWZ2510	PWZ2510	PWZ2510	PWZ2510	PWZ2510	PWZ2510	PWZ2510
NSP	Headphone board assembly	PWZ2522	PWZ2522	PWZ2522	PWZ2522	PWZ2522	PWZ2522	PWZ2522	PWZ2522			PWZ2522
Δ	Cord stopper	CM - 22C	CM - 22C	CM - 22C	CM - 22C	CM - 22	CM - 22	CM - 22B	CM - 22B	CM - 22B	CM - 22B	CM - 22B
Δ	AC power cord	PDG1015	PDG1015	PDG1015	PDG1015	RDG1010	RDG1010	PDG1003	VDG1051	RDG1022	PDG1013	PDG1003
Δ	Power transformer (AC120V)	PTT1237	PTT1237	PTT1237	PTT1237	PTT1237	PTT1237					
Δ	Power transformer (AC220 - 240V)							PTT1236	PTT1236	PTT1236		PTT1236
Δ	Power transformer (AC110 - 127/220 - 240V)										PTT1238	
	32P F.F.C/30V	PDD1041										
	30P F.F.C/30V		PDD1049	PDD1049	PDD1049	PDD1049	PDD1049	PDD1049	PDD1049	PDD1049	PDD1049	PDD1049
	10 key	PAC1735	PAC1710	PAC1710	PAC1710	PAC1710	PAC1710	PAC1710	PAC1710	PAC1710	PAC1710	PAC1710
	Display window	PAM1599	PAM1596	PAM1596	PAM1596	PAM1596	PAM1596	PAM1611	PAM1611	PAM1626	PAM1626	PAM1626
	Function panel assembly	PEA1267	PEA1260	PEA1260	PEA1260	PEA1260	PEA1260	PEA1260	PEA1260			
	Headphone knob	PAC1707	PAC1707	PAC1707	PAC1707	PAC1707	PAC1707	PAC1707	PAC1707			
	Function panel	PNW2248	PNW2241	PNW2241	PNW2241	PNW2241	PNW2241	PNW2241	PNW2241	PNW2277	PNW2276	PNW2276
	Insulator	PNW1912	PNW1912	PNW1912	PNW1912	PNW1912	PNW1912	PNW1912	PNW1912			
	Foot assembly									PXA1201	PXA1201	PXA1201
NSP	Rear base	PNA1921	PNA1910	PNA1945	PNA2012	PNA1946	PNA1947	PNA1948	PNA1949	PNA1951	PNA1950	PNA2026
NSP	65 label	ORW1069	ORW1069	ORW1069	ORW1069							
	CD Packing case	PHG1877	PHG1863	PHG1885	PHG1948	PHG1886	PHG1887	PHG1888	PHG1889	PHG1891	PHG1890	PHG1891
	Protector (R)	PHA1240	PHA1240	PHA1260	PHA1260	PHA1240	PHA1260	PHA1260	PHA1254	PHA1240	PHA1240	PHA1240
	Remote control unit	PWW1061										
	Connection cord with mini plug	PDE - 319	PDE - 319	PDE - 319	PDE - 319	PDE - 319	PDE - 319	PDE - 319	PDE - 319	PDE - 319		
NSP	Battery (R03, AAA)	VEM - 022										
	Operating instructions (French)					PRC1054	PRC1054					
	Operating instructions (English)	PRB1182	PRB1182	PRB1182	PRB1182	PRB1182	PRB1182		PRB1182	PRB1182	PRB1182	PRB1182
	Operating instructions (English/French/German/Italian/Dutch/ Spanish/Swedish/Portuguese)							PRE1176				
	Operating instructions (Spanish)										PRC1057	


MOTHER BOARD ASSEMBLY
PWM1730, PWM1731, PWM1732, PWM1733, PWM1734 and PWM1735 have the same construction except for the following:

Mark	Symbol & Description	Part No.					
		PWM1735	PWM1730	PWM1731	PWM1732	PWM1733	PWM1734
	IC405	NJM4565D - D	NJM4558D - D	NJM4558D - D	NJM4558D - D	NJM4558D - D	NJM4558D - D
	IC31, IC32			ICP-N10	ICP-N10	ICP-N10	ICP-N10
	IC406	BA15218	BA15218	BA15218			
	Q451, Q452	DTA124ES		DTA124ES			
	Q453, Q454	2SB1296		2SB1296			
	D391	1SS254					
	D392 - D394	1SS254	1SS254	1SS254	1SS254		
	L470, L471	LAU010K	LAU010K	LAU010K			
	L391	LAU010K	LAU010K	LAU010K	LAU010K		
	C433, C434	PCH1107	CEAS220M25	CEAS220M25	CEAS220M25	CEAS220M25	CEAS220M25
	C451, C452	CEAS4R7M50		CEAS4R7M50			
	C393	CCCSL101J50	CCCSL101J50	CCCSL101J50	CCCSL101J50		
	R445, R446	RD1/6PM271J	RD1/6PM471J	RD1/6PM271J	RD1/6PM102J	RD1/6PM102J	RD1/6PM102J
	R459 - R462	RD1/6PM271J		RD1/6PM271J			
	R451, R452	RD1/6PM473J		RD1/6PM473J			
	R453, R454	RD1/6PM470J		RD1/6PM470J			
	R455 - R458	RD1/6PM102J		RD1/6PM102J			
	R447, R448	RD1/6PM471J	RD1/6PM471J	RD1/6PM471J			
	R392	RD1/6PM102J	RD1/6PM102J	RD1/6PM102J	RD1/6PM102J		
	S5 (Voltage selector)					PSB1006	
	CN351 32P FFC connector	HLEM32S - 1					
	CN351 30P FFC connector		HLEM30S - 1	HLEM30S - 1	HLEM30S - 1	HLEM30S - 1	HLEM30S - 1
	JA391, JA392 Remote control jack	PKN1004	PKN1004	PKN1004	PKN1004		

FUNCTION BOARD ASSEMBLY
PWZ2510 and PWZ2511 have the same construction except for the following:

Mark	Symbol & Description	Part No.		Remarks
		PWZ2511	PWZ2510	
	CN701 32P FFC connector	HLEM32R - 1		
	CN701 30P FFC connector		HLEM30R - 1	

10. PANEL FACILITIES

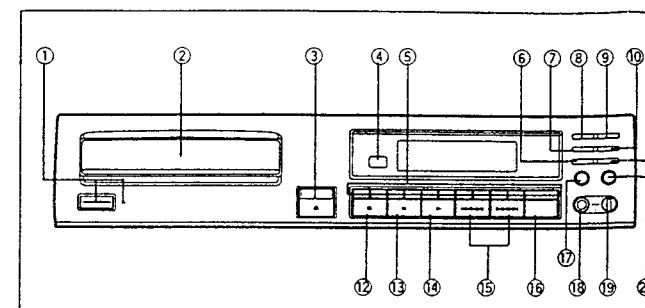

FRONT PANEL

- ① POWER STANDBY/ON switch and STANDBY indicator
- ② Disc tray
- ③ OPEN/CLOSE button (▲)
- ④ Remote sensor
Receives the signal from the remote control unit.
• The PD-102 is not equipped with the remote sensor.
- ⑤ Digit buttons (1 - 10, >10)

- ⑥ COMPU/AUTO EDIT button
- ⑦ DISPLAY OFF button
- ⑧ TIME button
- ⑨ REPEAT button
- ⑩ CLEAR button
- ⑪ PEAK SEARCH button
- ⑫ Stop button (■)
- ⑬ Pause button (II)
- ⑭ Play button (▶)
- ⑮ Track/Manual search buttons (◀◀ ◀▶ ▶▶ ▶▶)
- ⑯ PROGRAM button
- ⑰ RANDOM button
- ⑱ Headphones jack (PHONES)*
- ⑲ Headphones volume control (LEVEL)*
- ⑳ HI-LITE scan button

* The multi-voltage, Singapore and Australian models of the PD-102 are not equipped with the headphones jack and headphones volume control.

11. SPECIFICATIONS

1. General

Type Compact disc digital audio system
Power requirements
European and Singapore models AC 220 - 240 V, 50/60 Hz
U.K. and Australian models AC 220 - 240 V, 60 Hz
U.S. and Canadian models AC 120 V, 60Hz
Other models AC 110 - 127/220 - 240 V (Switchable), 50/60 Hz
Power consumption
U.S. and Canadian models 11 W
Other models 12 W
Operating temperature +5°C - +35°C
+41°F - +95°F

Weight 3.4 kg (7 lb, 11 oz)
External dimensions
U.S., Canadian, U.K. and
European models 420(W) X 276(D) X 101(H) mm
16-9/16(W) X 10-7/8(D) X 4(H) in
Other models 420(W) X 276(D) X 96(H) mm
16-9/16(W) X 10-7/8(D) X 3-3/4(H) in

2. Audio section

Frequency response 2 Hz - 20 kHz
S/N ratio
PD-202, European and U.K. models
of PD-101 102 dB or more (EIAJ)
Other models 98 dB or more (EIAJ)
Dynamic range 96 dB or more (EIAJ)
Harmonic distortion 0.003% or less (EIAJ)
Output voltage 2.0V
Wow and flutter Limit of measurement
(±0.001% W.PEAK) or less (EIAJ)
Channels 2-channel (stereo)

3. Output terminal

Audio line output jacks
Control input/output jacks (available with the PD-102 (except for Singapore and multi-voltage models) and U.S. and Canadian models of the PD-202 only: Not available with models for military zones (multi-voltage types))
CD-DECK SYNCHRO jack
Headphones jack (with volume control) (Australia, Singapore and multi-voltage models of the PD-102 are not equipped with the headphones jack and headphones volume control.)

4. Accessories

- Remote control unit (PD-202 only) 1
- Size AAA/R03/dry batteries (PD-202 only) 2
- Control cord (provided with PD-102 (except for Singapore and multi-voltage models) and U.S. and Canadian models of PD-202 only: Not available with models for military zones (multi-voltage types)) 1
- Output cable 1
- Operating instructions 1

NOTE:
Specifications and design subject to possible modification without notice, due to improvements.